

TOMEI 取扱説明書 The Engine Specialist INSTALLATION MANUAL

カーボンリヤバンパーカバー マスタング エコブースト 2015+ CARBON REAR BUMPER COVER for Mustang EcoBoost 2015+

適合 APPLICATION	FORD Mustang EcoBoost 2015+	
品番 PART NUMBER	Premium Fastback Fastback	TE301A-FR01A TE301A-FR01B

目次 / INDEX

P2 日本語

P5 English

このたびは弊社製品をお買い上げいただき、まことにありがとうございます。
ご使用前にこの説明書をよくお読みのうえ正しくお使いください。
お読みになった後もすぐ取り出せる場所に大切に保管してください。
説明書に書かれている注意事項は必ず守ってください。
各自動車メーカーの発行する整備要領書が必要になります。本書と合わせてお使いください。
不適切な使用により事故が生じた場合、弊社では責任を負いかねますので、
あらかじめご了承ください。
販売店様で取り付けをされる場合は本書を必ずお客様へお渡しください。

Thank you for purchasing a TOMEI product.

Please read this installation manual carefully prior to installation/use.

Ensure you keep this document stored in a safe location for future reference.


Pay close attention to and adhere to the various warnings/cautions contained herein.

You should also consult the official servicing manual for your vehicle when installing this product.

Please note that inappropriate installation/use of this product will be at the owner's own risk and/or responsibility.

Retailers/Workshops should ensure this document is given to the end user.

部品構成 下記の部品・数量が揃っているかご確認ください。

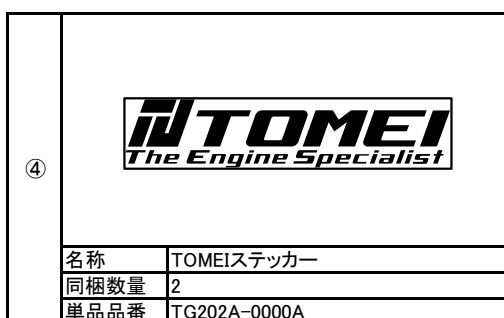

取付作業に必要な工具類

- ・ 一般工具
- ・ 強力両面テープ
- ・ ハンドドリル
- ・ センタドリル、Φ4.2ドリル
- ・ 保護具

⚠ 注意

- この取扱説明書は製品に関わる特記事項についてまとめたものです。実際の作業や手順については各自動車メーカー発行の整備要領書をご確認ください。
- 本製品の取り付けは設備の整った環境で、資格をもった整備士が行ってください。
- 適合する車種以外へのご使用はおやめください。本製品および、周辺部品を破損する恐れがあります。
- 本製品の取り付けに必要な各部品の脱着の際には指定トルクなどを守り、無理な力を加えないでください。本製品および、周辺部品を破損する恐れがあります。
- 本製品を取り付ける際には、適切な工具、保護具を使用してください。ご使用にならないとけがにつながり危険です。

⚠ 警告

- 本製品の取り付けはエキゾーストシステムが十分に冷えた状態で行ってください。
- 部品の欠落により車両の破損・火災が起こる可能性や、後続・周辺車両へ害がおよぶ恐れがあるため、製品構成部品の取り付けは確実に行ってください。

1. 取り付け

【装着手順】

1. カバー側取り付け部、バンパー側取り付け部の脱脂を行う。
2. 強力両面テープ、および付属のボルト・ナットにて10点程度固定する。



注意

- 部品が脱落しないように確実に固定する。

【各部品の装着位置図】

同梱部品の装着箇所は下図の通りです。



<キット同梱部品使用箇所と締付トルク>

①	カーボンリアバンパーカバー
②	ボタンボルトM4
③	フランジナットM4 [4.3N.m(0.45kgf-m)]

2. 取り付け後の確認

1. 取り付けに緩みがないか、確認する。
2. エンジンを始動し、アイドルリングから約2500rpm程度まで回転を上げ、異常音がないか確認する。
3. 試運転を行い、再度緩みや異常音がないか確認する。

警告


- ・ 緩みがあると周辺部品が損傷し故障の原因となるため、確認は慎重に行ってください。
- ・ 走行中に異常を感じた場合は直ちに走行を中止し、確認を行ってください。
- ・ その場で修復を行う場合は、エキゾーストシステムが十分に冷えた状態で行ってください。
- ・ 部品の脱落等が生じている場合は、エンジンを再始動せず、専門業者に修理を依頼し、指示に従ってください。

注意

- ・ 部品に緩みがないか、定期的に確認を行ってください。

KIT CONTENTS

Check to ensure all the following items are included in this kit.

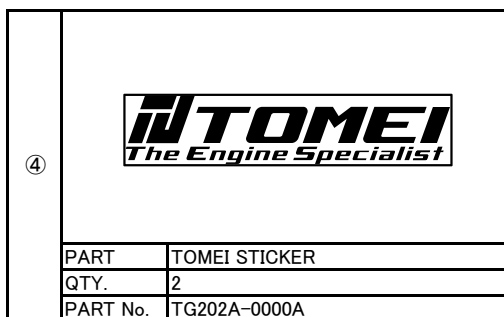

REQUIRED TOOLS FOR INSTALLATION

- General engine maintenance tools
- Hand/power drill
- Center drill and $\Phi 4.2$ mm drill bit
- Safety gear
- Extra strong double sided tape



CAUTION

- This installation manual contains important information regarding this product.
For details regarding the assembly/disassembly of stock components, please refer to the vehicle's official servicing manual.
- This product should be installed by a trained professional in a well-equipped workshop.
- Only install this product on the specified vehicles to avoid damaging the product and/or surrounding parts.
- Ensure the appropriate amount of torque is used to remove/install the fastenings. Do *NOT* use excessive force as this can damage the product and/or the engine.
- Always use the appropriate tools and safety equipment when installing this product.
Failing to do so is extremely dangerous and may result in injury.



WARNING

- Only install this product when the engine and all exhaust related components are cold.
- Ensure that all parts are fitted correctly during installation to avoid potential fire hazards and/or damage. Failing to do so is not only dangerous to you but also those around you.

1. INSTALLATION

[INSTALLATION PROCESS]

1. Clean/degrease the contact surfaces on both the bumper and bumper cover.
2. Install and secure the bumper cover in place at 10 points using extra strong double sided tape and/or the included fastenings.




CAUTION

- Ensure the product is fitted securely so that it will not come loose.

[Mounting position of each component]

Install the included components as shown below.

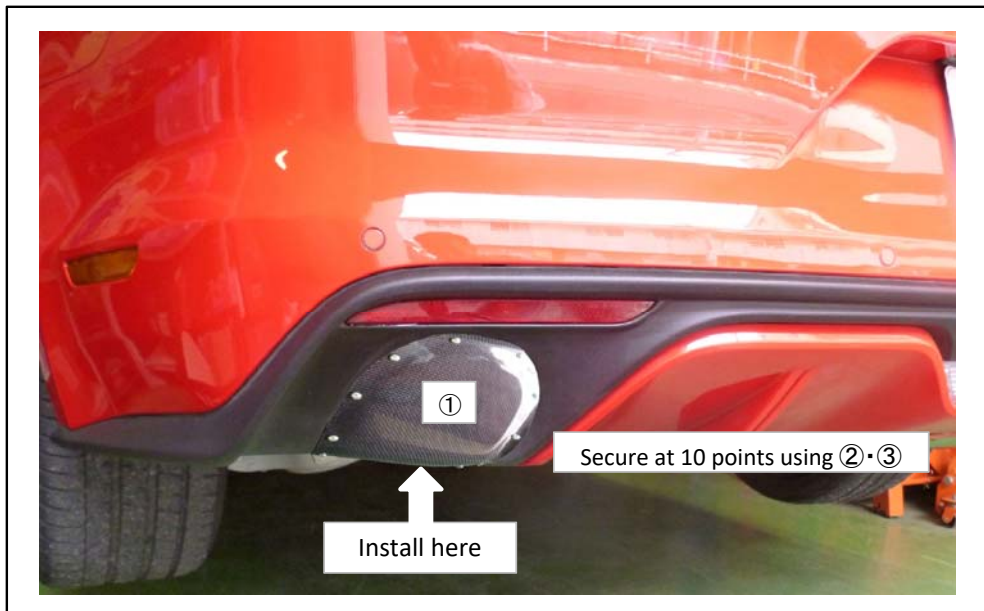

<Positioning and torque specs. of the included components>

①	CARBON REAR BUMPER COVER
②	BUTTON BOLT M4
③	FLANGE NUT M4 [4.3N.m(0.45kgf-m)]

2. POST INSTALLATION CHECKS

1. Check to ensure the product is fitted securely.
2. Start the engine and rev to 2500rpm. Check for any abnormal sounds.
3. Test drive the vehicle and check again for any abnormal sounds and/or loose parts.



WARNING

- Be thorough when performing checks as loose parts can lead to accidents and/or damage to the product.
- If there are any abnormalities whilst using the vehicle, stop immediately and check for faults.
- Ensure all exhaust related components have cooled before attempting any repairs.
- Do not restart the engine should you notice any missing/broken parts. Instead, consult a trained professional and follow their instructions.



CAUTION

- Periodically check to ensure that no parts have come loose.

TOMEIUSA

13 Orchard Suite 107
Lake Forest, CA 92630 USA
TEL : +1-949-855-6577
FAX : +1-949-855-6525
<http://www.tomeiusa.com>

OPEN: Monday - Friday (National holidays and public holidays excluded).
10:00 - 19:00 PST