

取扱説明書 INSTALLATION MANUAL

適合 APPLICATION	SUBARU WRX 2015+ 6MT USDM
品番 PART NUMBER	TB6100-SB04A

警告/WARNING

競技専用部品

米国の公道では使用できません

FOR RACING USE ONLY

NOT LEGAL FOR USE IN THE U.S. ON PUBLIC ROADS

- ※ 詳しくは2ページ目をご確認ください。
- * Please see page 2 for details.

目次 / INDEX

P3 日本語

P7 English

このたびは弊社製品をお買い上げいただき、まことにありがとうございます。

ご使用前にこの説明書をよくお読みのうえ正しくお使いください。

お読みになった後もすぐ取り出せる場所に大切に保管してください。

説明書に書かれている注意事項は必ず守ってください。

各自動車メーカーの発行する整備要領書が必要になります。本書と合わせてお使いください。

不適切な使用により事故が生じた場合、弊社では責任を負いかねますので、

あらかじめご了承ください。

販売店様で取り付けをされる場合は本書を必ずお客様へお渡しください。

Thank you for purchasing a TOMEI product.

Please read this installation manual carefully prior to installation/use.

Ensure you keep this document stored in a safe location for future reference.

 $\label{prop:contained} \mbox{Pay close attention to and adhere to the various warnings/cautions contained herein.}$

You should also consult the official servicing manual for your vehicle when installing this product.

Please note that inappropriate installation/use of this product will be at the owner's own risk and/or responsibility.

Retailers/Workshops should ensure this document is given to the end user.



レース専用使用 - 国際的な遵守に関するご案内

本製品は、モータースポーツ愛好家の皆様に世界中で流通・販売することを目的として、 日本で設計・開発されました。

本製品の法的使用は、地域、国、または地方自治体の排出ガス規制によって異なる場合がありますのでご注意ください。

特に、米国では大気浄化法(EPA)に基づく厳しい規制が課されており、本製品は米国内の公道または 高速道路を走行する車両への使用は合法とは認められません。

米国における公道または非公認レース活動における本製品の使用は固く禁じられています。

本製品は、公式に認可された競技のみを目的としており、

現地の法律で明示的に許可されている場合を除き、汚染規制対象の自動車への使用は意図されていません。

本製品は、現地の環境法および規制の枠組みにより、制限または禁止事項が適用される場合があります。それぞれの国または地域の適用されるすべての法律および規制を完全に遵守することは、エンドユーザーの責任です。

当社は国際的な販売代理店ネットワークを通じて事業を展開しており、各製品が使用される具体的な用途や管轄区域について直接的な知識を有していません。したがって、本製品の使用はお客様の判断と責任において行ってください。

本製品を購入、設置、または使用する前に、この注意事項をよくお読みください。
不適切または違法な使用は、罰則、罰金、または車両の不適合につながる可能性があります。



WARNING

For Racing Use Only - International Compliance Notice

This product is designed and developed in Japan with the intention of being distributed and sold globally to motorsports enthusiasts. Please be advised that the legal use of this product may vary depending on regional, national, or local emissions regulations.

In particular, the United States imposes strict restrictions under the Clean Air Act (EPA), and this product is not considered legal for use on vehicles operated on public roads or highways within the United States.

Use of this product on public roads or in any unsanctioned racing activity in the United States is strictly prohibited.


This product is intended for use in officially sanctioned competition only, and is not intended for use on any pollution-controlled motor vehicle unless explicitly permitted by local law.

This product may be subject to limitations or prohibitions under local environmental laws and regulatory frameworks. It is the responsibility of the end user to ensure full compliance with all applicable laws and regulations in their respective country or region.

Our company operates through an international distributor network and does not have direct knowledge of the specific applications or jurisdictions in which each product will be used. Therefore, the use of this product is solely at the discretion and responsibility of the customer.

Please read this notice carefully before purchasing, installing, or using this product. Improper or illegal use may result in penalties, fines, or vehicle non-compliance.

製品内容と数量 下記の内容と数量が揃っているかをご確認ください。

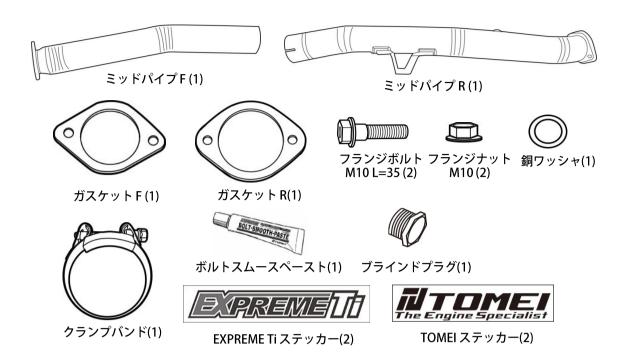

作業に必要な工具類 取り

取り付けには下記が必要です。

・エンジン整備工具一式 ・トルクレンチ ・整備要領書



注意

- この取扱説明書は製品に関わる特記事項についてまとめたものです。 実際の作業や手順については各自動車メーカー発行の整備要領書をご確認ください。
- 本製品は自動車競技部品です。サーキットなどの公道ではない閉鎖された場所で使用してください。
- 本製品の取り付けは設備の整った環境で、資格をもった整備士が行ってください。
- 適合する車種以外へのご使用はおやめください。本製品および、エンジンを破損する恐れがあります
- 本製品の取り付けに必要な各部品の脱着の際には指定トルクなどを守り、無理な力を加えないでください。本製品および、エンジンを破損する恐れがあります。
- 本製品を取り付ける際には、適切な工具、保護具を使用してください。 ご使用にならないとけがにつながり危険です。



警告

- 本製品の取り付けはエンジンおよび、エキゾーストシステムが十分に冷えた状態で行ってください。
- 部品の欠落により車両の破損・火災が起こる可能性や、後続・周辺車両へ害がおよぶ恐れがあるため、製品構成部品の取り付けは確実に行ってください。

1. 純正触媒コンバータの取り外し

▲ ここで記載するのは簡易手順です。各部の詳細な脱着方法は、必ず整備要領書を参照してください。


- 1. バッテリーマイナス端子を取り外す。
- 2. フロントコンプリートコンバータ (セカンダリ触媒コンバータ) を取り外す。

2. TOMEIチタニウムミッドパイプの取り付け

【各部品の装着位置図】

同梱部品の装着箇所は下図の通りです。

※付属されていない部位のボルト・ナットはノーマルを再使用

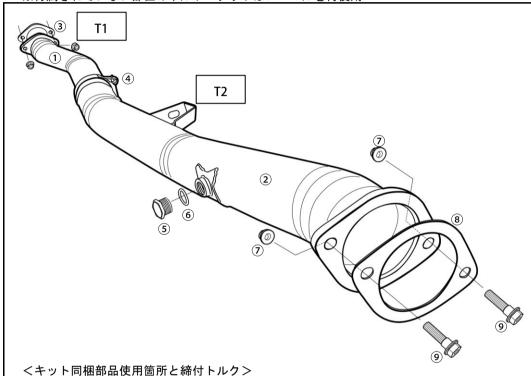

② ミッドパイプR

③ ガスケットF

④ クランプバンド [25. ON. m(2. 6kgf-m)]

⑤ A/Fセンサープラグ [40.0~50.0N.m(4.1~5.7kgf-m)]

⑥ 銅ワッシャ

⑦ フランジナット [34.0~39.0N.m(3.5~4.0kgf-m)]

⑧ ガスケットR

⑨ フランジボルト

36. ON. m (3. 6kgf-m) 31. ON. m (3. 1kgf-m) T2

※ 高温にさらされる部分には焼付き や固着を防止するため、付属の ボルトスムースペーストを 塗布してください。

【装着手順】

- 1. ミッドパイプRに付属のクランプバンドを差し込み、ミッドパイプFに仮組みする。
 - ※ ・ミッドパイプF (前頁①) ・ミッドパイプR (前頁②)
 - ・付属クランプバンド(前頁④)使用。
- 2. センタエキゾーストパイプ (プライマリ触媒コンバータ) に付属のガスケットF (前頁③) を取り付ける。
 - ※・付属ガスケットF(前頁③)使用。
- 3. センタエキゾーストパイプ側は純正ナット、マフラー側は付属ガスケットR・フランジナット・フランジボルトを使用し、ミッドパイプASSYを仮装着する。
 - ※・付属ガスケットR(前頁®)・フランジナットM10(前頁⑦)
 - ・フランジボルトM10(前頁⑨)使用。
- 4. 純正ボルトを使用し、ミッドパイプASSYをステーに仮装着する。
- 5. 各部のクリアランスに注意しながら、前側から順に本締めを行う。

<締付トルク>

T-1 [36.0N.m(3.6kgf-m)] T-2 [31.0N.m(3.1kgf-m)] フランジナット(前頁⑦)[34.0~39.0N.m(3.5~4.0kgf-m)]

6. 各部のクリアランスが確保されていることを再度確認し、差込部クランプバンドの本締めを行う。 <締付トルク>

(前頁4) [25N·m(2.6kgf-m)]

7. A/Fセンサーを取り付けない場合、付属のプラグ・銅ワッシャを装着する。

<締付トルク>

(前頁 ⑤・⑥) [40.0~50.0N.m(4.1~5.7kgf-m)]

注意

- ・車体各部とのクリアランスや、干渉のない事を確認してから本締めを行ってください。 なお、車両個体差により十分なクリアランスが得られない場合は、 センタエキゾーストパイプ・センタマフラーの取り付けボルトを各部が動く程度に 緩め、本品の装着クリアランスを確保した後、本締めしてください。
- ・ミッドパイプに油分などが付着した状態で使用すると、汚れや焼けの 原因となります。取付後は、必ず脱脂を行ってください。
- ・装着・使用状況により、周辺部品に熱害が及ぶ可能性があります。 必要に応じ、遮熱対策を行ってください。
- 8. バッテリーマイナス端子を取り付ける。

3. 取り付け後の確認

- 1. 各部に干渉がないか、再度確認する。
- 2. エンジンを始動し、アイドリングから約2500rpm程度まで回転を上げ、異常音がないか確認する。
- 3. 試運転を行い、再度緩みや異常音がないか確認する。

⚠ 警告


- ・緩みや干渉があると性能の低下や、周辺部品が損傷し故障の原因となるため、確認は慎重に行ってください。
- ・排気漏れがあると、性能の低下や排気ガスによる中毒を起こす原因となり危険です。
- ・走行中に異常を感じた場合は直ちに走行を中止し、確認を行ってください。
- ・その場で修復を行う場合は、エキゾーストシステムが十分に冷えた状態で行ってください。
- ・部品の脱落等が生じている場合は、エンジンを再始動せず、専門業者に修理を依頼し、 指示に従ってください。

注意

- ・本品を装着した際、車両仕様によってはエンジン特性に大きな変化がある場合があります。装着後は、エンジンセッティングを確認し、必要に応じてそれらの再セッティングを行ってください。
- ・車両により、エンジンチェックランプが点灯する可能性があります。

KIT CONTENTS

Check to ensure all the following items are included in this kit.

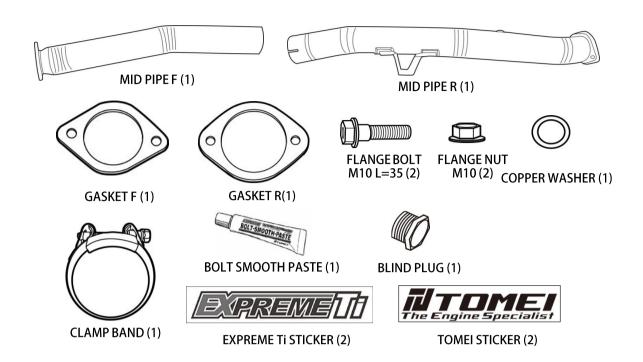

REQUIRED TOOLS FOR INSTALLATION

- General engine maintenance tools
 Torque Wrench
- · Servicing Manual



CAUTION

- This installation manual contains important information regarding this product. For details regarding the assembly/disassembly of stock components, please refer to the vehicle's official servicing manual.
- This product is intended for motorsport/competition use and should NOT be used on public roads.
- This product should be installed by a trained professional in a well-equipped workshop.
- Only install this product on the specified vehicles to avoid product and/or engine damage.
- Ensure the appropriate amount of torque is used to remove/install the fastenings. Do <u>NOT</u> use excessive force as this can damage the product and/or the engine.
- Always use the appropriate tools and safety equipment when installing this product. Failing to do so is extremely dangerous and may result in injury.



WARNING

- Only install this product when the engine and all exhaust related components are cold.
- Ensure that all parts are fitted correctly during installation to avoid potential fire hazards and/or damage. Failing to do so is not only dangerous to you but also those around you.

1. REMOVING THE STOCK CATALYTIC CONVERTER


This manual only provides basic instructions. For more details, please refer to the vehicle's official servicing manual.

- 1. Disconnect the negative battery terminal.
- 2. Remove the front (secondary) catalytic converter.

2. INSTALLING THE **TOMEI TITANIUM MID PIPE**

[Mounting position of each component]

Install the included components as shown below.

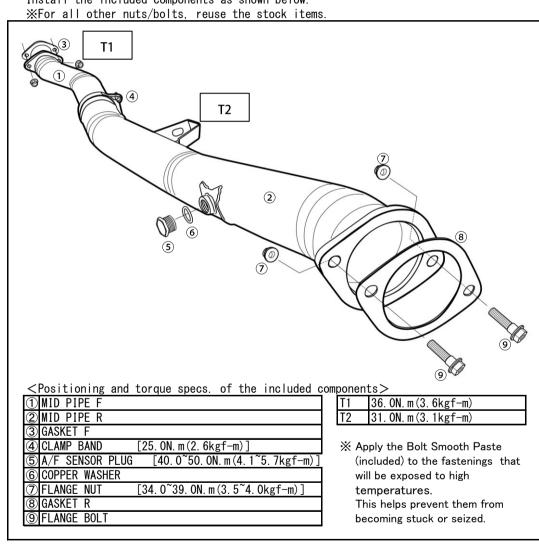

[INSTALLATION PROCESS]

- 1. Loosely fit Mid Pipe R to Mid Pipe F using the included Clamp Band.
 - ※ Parts used: MID PIPE F (①, previous page), MID PIPE R (②, previous page) and CLAMP BAND (④, previous page).
- 2. Attach the included Gasket F (③, previous page) to the Centre Exhaust Pipe (Primary Catalytic Converter).
 - X Part used: GASKET F (3, previous page).
- 3. Loosely install the Mid Pipe assembly. Use the stock nuts on the Centre Exhaust Pipe flange and for the Exhaust/Muffler flange, use the included Gasket R, Flange Nut and Flange Bolt.
 - Parts used: GASKET R (®, previous page), FLANGE NUT M10 (7), previous page), and FLANGE BOLT M10 (9), previous page).
- 4. Loosely affix the Mid Pipe assembly to the mounting bracket using the stock bolt(s).
- 5. Tighten down the fastenings in order from the front, ensuring sufficient clearance is achieved.

```
<Torque specs.>
T-1 [36.0N.m(3.6kgf-m)]    T-2 [31.0N.m(3.1kgf-m)]
FLANGE NUT (⑦, previous page) [34.0~39.0N.m(3.5~4.0kgf-m)]
```

6. Check again to ensure sufficient clearance has been achieved then tighten down the Clamp Bands.

```
<Torque specs.>
(4), previous page) [25N·m(2.6kgf-m)]
```

7. When using the Mid Pipe without an A/F Sensor, install the included Blind Plug together with the Copper Washer.

```
<Torque specs.> (⑤ • ⑥, previous page) [40.0 \sim 50.0N.m(4.1 \sim 5.7kgf-m)]
```

↑ CAUTION

- Ensure sufficient clearance and correct fitment has been achieved before completely
 tightening down the fastenings. In some cases, there may be insufficient clearance
 due to minor differences between individual vehicles. In such a case, loosen the
 fastenings on the centre exhaust/muffler and adjust the positioning until sufficient
 clearance is achieved before retightening the fastenings again.
- Ensure you clean the mid pipe after installation. Using the mid pipe whilst there is oil or other debris on it can cause blemishes and/or burn marks.
- Depending on the installation and use of the mid pipe, you may need to apply thermal insulation to prevent the surrounding components/areas from becoming damaged.
- 8. Re-connect the negative battery terminal.

3. INSTALLATION VERIFICATION

- 1. Check again to ensure the product is fitted correctly.
- 2. Start the engine and rev to 2500rpm. Check for any abnormal sounds.
- 3. Test drive the vehicle and check again for any abnormal sounds and/or loose parts.

♠ WARNING

- Be thorough when performing checks as incorrect fitment and/or loose parts can lead to accidents, reduced performance as well as damage to surrounding components.
- Exhaust leaks not only reduce performance but can also be a health hazard and should be addressed immediately.
- · If there are any abnormalities whilst using the vehicle, stop immediately and check for faults.
- Ensure all exhaust related components have cooled before attempting any repairs.
- Do not restart the engine should you notice anything abnormal such as missing/broken parts. Instead, consult a trained professional and follow their instructions.



♠ CAUTION

- · Once this product has been installed on the vehicle, the engine characteristics may change depending on the setup. After installation, adjust the engine/ECU settings as necessary.
- The 'Check engine light' (CEL) may illuminate after installing this product.



27 Rancho Cir, Lake Forest, CA 92630 USA Phone : +1-949-855-6577

www.tomeiusa.com

OPEN: Monday-Friday
(National holidays and public holidays excluded)
10:00 - 19:00 PST