



MX8265 RB25DET

P/N | TB401A-NS06A

TURBOCHARGER SPECIFICATION SHEET


COMPRESSOR

コンプレッサーホイール COMPRESSOR WHEEL

㊦入口径 IND (mm)	㊧外径 EXD (mm)	トリム TRIM	ブレード数 BLADES	材質 MATERIAL	製法 PRODUCTION
54.8	76.2	52	6	A2618	CNC削出 CNC BILLET

コンプレッサーハウジング COMPRESSOR HOUSING

入口径 IND (mm)	外径 EXD (mm)	A/R
55.8	42.62	0.57

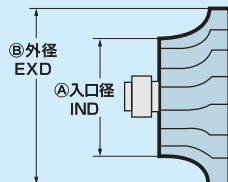


センターカートリッジ BEARING TYPE

ジャーナルベアリング
JOURNAL BEARING

TURBINE

タービンホイール TURBINE WHEEL

㊨出口径 EXD (mm)	㊩外径 IND (mm)	トリム TRIM	ブレード数 BLADES	材質 MATERIAL	製法 PRODUCTION
58.8	67.0	77	12	K418	鋳造 CAST

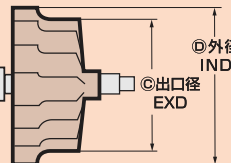




タービンハウジング TURBINE HOUSING

入口 IND	出口 EXD	A/R
T3	RB25	0.57

初期設定過給圧
INITIAL BOOST SETTING




1.0kgf/cm²

⚠ ブースト圧設定時のご注意

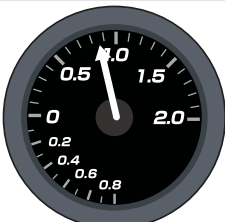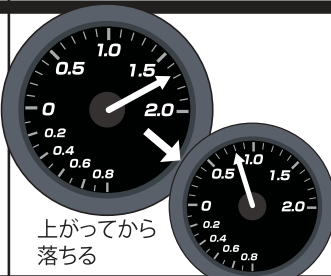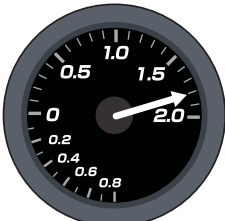アクチュエーター スプリング	ブースト コントローラー		エンジンへの 負荷	パワー	ブースト		こんな方へ
標準	OFF	 設定値以上上がらない	○	△	安定度	立ち上がりが遅い 高回転時に垂れる	街乗り中心 ・エンジン強化無し ・パワーアップよりも エンジンを大事したい
					調整	不可能	
標準	ON	 上がってから 落ちる	△	○	安定度	高回転時に垂れる	サーキット走行をする ・必要な時にパワーを上げたい ・最低限のエンジン強化済み ・水温・油温対策済み
					調整	可能	
強化	ON	 下げたくても下がらない	×	◎	安定度	立ち上がり・ 高回転時ともに良い	ドラッグレース・ 本格的なサーキット走行 ・エンジン強化済み ・水温・油温対策済み ・エンジンに詳しい
					調整	可能だが スプリング設定 以下には 下げられない	

ブースト圧の設定はブーストコントローラーで行ってください。

! BOOST SETTING CAUTION

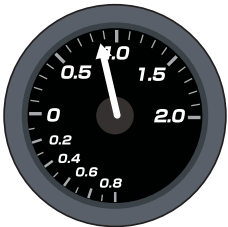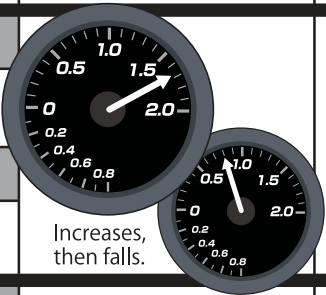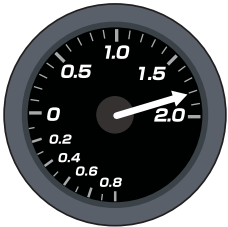		STRESS ON ENGINE	POWER	BOOST	GOOD FOR
ACTUATOR SPRING	 Doesn't exceed preset.	LIGHT	GOOD	CHARACTERISTICS	STREET • Stock engine internals. • Engine longevity more important than power.
DEFAULT				Slow spool, fall-off at high rpm.	
BOOST CONTROLLER				ADJUSTABILITY	
OFF				NONE	
ACTUATOR SPRING	 Increases, then falls.	MILD	GREAT	CHARACTERISTICS	TRACK • More power when you need it. • Upgraded engine internals. • Upgraded cooling for oil & coolant.
DEFAULT				Fall-off at high rpm.	
BOOST CONTROLLER				ADJUSTABILITY	
ON				YES	
ACTUATOR SPRING	 Cannot be lowered beyond preset.	HEAVY	HIGH!	CHARACTERISTICS	DRAG/ PRO RACE • Upgraded engine internals. • Upgraded cooling for oil & coolant. • Advanced engine builders.
UPGRADED				Good spool, good high rpm performance.	
BOOST CONTROLLER				ADJUSTABILITY	
ON				YES but will not fall below preset spring pressure.	

**ALWAYS USE A BOOST CONTROLLER
TO CONFIGURE BOOST SETTINGS**



取扱説明書 INSTALLATION MANUAL



ターボチャージャーキット ARMS MX8265 RB25DET TURBOCHARGER KIT ARMS MX8265 RB25DET

品番	TB401A-NS06A
PART NUMBER	

適合	R33/R34/C34/C35/WC34 RB25DET搭載車
APPLICATION	RB25DET powered R33/R34/C34/C35/WC34

目次 / INDEX

P2 日本語

P23 ENGLISH

このたびは弊社製品をお買い上げいただき、まことにありがとうございます。
ご使用前にこの説明書をよくお読みのうえ正しくお使いください。
お読みになった後もすぐ取り出せる場所に大切に保管してください。
説明書に書かれている注意事項は必ず守ってください。
各自動車メーカーの発行する整備要領書が必要になります。本書と合わせて
お使いください。
不適切な使用により事故が生じた場合、弊社では責任を負いかねますので、
あらかじめご了承ください。

Thank you for purchasing a TOMEI product.
Please read this installation manual carefully prior to installation/use.
Ensure you keep this document stored in a safe location for future reference.
Pay close attention to and adhere to the various warnings/cautions contained herein.
You should also consult the official servicing manual for your vehicle when installing
this product.
Please note that inappropriate installation/use of this product will be at the owner's
own risk and/or responsibility.
Retailers/Workshops should ensure this document is given to the end user.



注意

- 本取扱説明書は製品に関わる特記事項についてのみ記載しています。実際の作業や手順については各自動車メーカー発行の整備要領書をご確認ください。
- 本製品は自動車競技部品です。サーキットなどの公道ではない閉鎖された場所で使用してください。
- 本製品を取り付けることにより、エンジン出力が向上します。そのためエンジン制御やその他周辺装置の最適化が必要になります。
- ターボメーターなどで常にコンディションの確認をしてください。



警告

- 適合する車種以外へのご使用はおやめください。本製品および、エンジンを破損する恐れがあります。
- 本製品の取り付けは設備の整った環境で、資格をもった整備士が行ってください。
- 本製品を取り付ける際には、適切な工具、保護具を使用してください。ご使用にならないとけがにつながり危険です。
- 本製品の取り付けはエンジンが十分に冷えた状態で行ってください。エンジンが冷えていない状態の作業は火傷の恐れがあります。
- 本製品の取り付けに必要な各部品の脱着の際には指定トルクなどを守り、無理な力を加えないでください。本製品および、エンジンを破損する恐れがあります。
- エンジンを始動する際には必ずオイル/冷却水の漏れなどの点検を行ってください。オイル/冷却水の漏れはエンジンの破損につながります。

取付作業に必要な工具類

- エンジン整備工具一式
- トルクレンチ
- 整備要領書

部品構成



下記の部品・数量が揃っているかご確認ください。

①			補修部品名称	品番
			CHRA	TB401B-CRA10
			リビルトキット	TB401B-RBK01
			アクチュエーター	TB401B-ACT07
			コンプレッサーハウジング	TB401B-COH10
			コンプレッサーホイール	TB401B-COW07
	名称	ターボ本体	タービンハウジング	TB401B-TBH11
	同梱数量	1	タービンホイール	TB401B-TBW06

オイルフィード

②				
	名称	メッシュホース 160mm	名称	バンジョーボルト M12
	同梱数量	1	同梱数量	1
	単品品番	TB401B-OFP15	単品品番	TB401B-BJB02

④				
	名称	ワッシャー M12	名称	バンジョーフィッティング M12 4AN
	同梱数量	3	同梱数量	1
	単品品番	TB401B-WAS04	単品品番	TB401B-FIT10

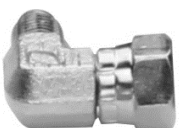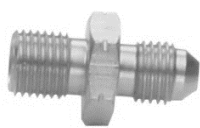⑥				
	名称	フィッティング 4AN M to F 90°	名称	フィッティング M12XP1.25 4AN
	同梱数量	1	同梱数量	1
	単品品番	TB401B-FIT01	単品品番	TB401B-FIT07

部品構成

下記の部品・数量が揃っているかご確認ください。

オイルリターン

⑧		
	名称	オイルリターンガスケット
	同梱数量	1
	単品品番	TB401B-ORG01


⑨		
	名称	オイルドレインパイプ
	同梱数量	1
	単品品番	TB401B-ODP07


⑩		
	名称	ボルト M6 P1.0 16mm
	同梱数量	2
	単品品番	TB401B-WBT01

部品構成

下記の部品・数量が揃っているかご確認ください。


ウォーターフィード

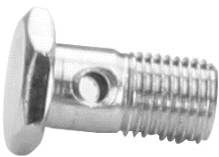
⑪		
	名称	ウォーターボルト M14 P1.5
	同梱数量	1
	単品品番	TB401B-WTB01

⑫		
	名称	ワッシャー M14
	同梱数量	3
	単品品番	TB401B-WAS02

⑬		
	名称	バンジョーフィッティング M14 4AN
	同梱数量	1
	単品品番	TB401B-FIT21

⑭		
	名称	メッシュホース 380mm
	同梱数量	1
	単品品番	TB401B-OPF07

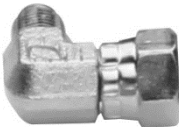
⑮		
	名称	フィッティング 4AN M to F 90°
	同梱数量	1
	単品品番	TB401B-FIT01

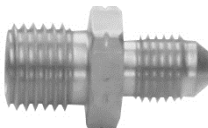⑯		
	名称	フィッティング M14 P1.5 4AN
	同梱数量	1
	単品品番	TB401B-FIT08


部品構成

下記の部品・数量が揃っているかご確認ください。

ウォーターリターン

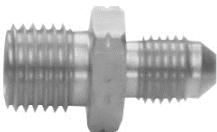⑰		
	名称	フィッティング M14 P1.5 4AN
	同梱数量	1
	単品品番	TB401B-FIT08

⑱		
	名称	ワッシャー M14
	同梱数量	1
	単品品番	TB401B-WAS02

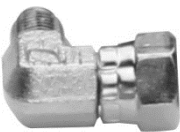⑲		
	名称	フィッティング 4AN M to F 90°
	同梱数量	1
	単品品番	TB401B-FIT01

⑳		
	名称	メッシュホース 470mm
	同梱数量	1
	単品品番	TB401B-OFP08

㉑		
	名称	フィッティング 11mm 4AN
	同梱数量	1
	単品品番	TB401B-FIT22


㉒		
	名称	ホースバンド 7-16mm
	同梱数量	1
	単品品番	TB401B-HBD06

部品構成

下記の部品・数量が揃っているかご確認ください。


ショートパーツ

②③		
	名称	コンプレッサー OUTガスケット
	同梱数量	1
	単品品番	TB401B-COG05

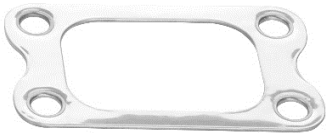②④		
	名称	タービンINガスケット
	同梱数量	1
	単品品番	TB401B-TIG05

②⑤		
	名称	タービンOUTガスケット
	同梱数量	1
	単品品番	TB401B-TOG07

②⑥		
	名称	ロックプレート
	同梱数量	2
	単品品番	TB401B-LKP02

②⑦		
	名称	スタッドボルト M8 P1.25 35mm / 18-10.5mm
	同梱数量	2
	単品品番	TB401B-STB04

②⑧		
	名称	バキュームホース 5X11mm
	同梱数量	1
	単品品番	TB401B-SLH03

②⑨		
	名称	耐熱ホース
	同梱数量	1
	単品品番	TB401B-TIT01

部品構成

下記の部品・数量が揃っているかご確認ください。

その他


③②		
	名称	ボルトスムースペースト
	同梱数量	1
	単品品番	PB6150-BSP01

③①		
	名称	アクチュエータースプリング 黒
	同梱数量	1
	単品品番	TB401B-SPR07

③②		
	名称	アクチュエータースプリング 赤
	同梱数量	1
	単品品番	TB401B-SPR10

③③		
	名称	アクチュエータースプリング ピンク
	同梱数量	1
	単品品番	TB401B-SPR11

③④		
	名称	アクチュエータースプリング 青
	同梱数量	1
	単品品番	TB401B-SPR12

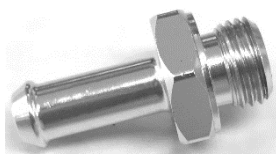③⑤		
	名称	アクチュエーターニップル (ストレート)
	同梱数量	1
	単品品番	TB401B-SAN01

③⑥		
	名称	TOMEIステッカー
	同梱数量	2
	単品品番	TG201A-0000A

③⑦		
	名称	ARMSステッカー
	同梱数量	2
	単品品番	TG204A-0000A

部品構成

下記の部品・数量が揃っているかご確認ください。

その他

③⑧		
	名称	エンブレム
	同梱数量	1
	単品品番	TE501A-0000A

③⑨		
	名称	取扱説明書（本書）
	同梱数量	1
	単品品番	

④①		
	名称	アクチュエーター取扱説明書
	同梱数量	1
	単品品番	

④①		
	名称	スペックシート
	同梱数量	1
	単品品番	-

④②		
	名称	保証登録カード
	同梱数量	1
	単品品番	-

④③		
	名称	保証登録のお願い
	同梱数量	1
	単品品番	-

④④		
	名称	過給圧設定時のご注意
	同梱数量	1
	単品品番	-

1. 純正ターボチャージャーの取り外し

バッテリーのマイナス端子を取り外し、ターボチャージャーや周辺装置を取り外してください。



- 各部の詳細な脱着方法は必ず整備要領書を参照してください。
- 再使用する部品は取り外し時に破損させないように注意してください。
- 部品を取り外した後の開口部には異物が入らないようテープなどで塞いで作業してください。

1-1 準備作業


- ① アンダーカバーセンターを取り外す。
- ② 冷却水を抜く。
- ③ フロントパイプ、タワーバーを取り外す。
- ④ エアフロメーターカプラーを外し、エアクリーナーを取り外す。
- ⑤ パワーステアリングフルードタンクステーを外し、タンクを車両前方に移動する。



パワーステアリングフルードがこぼれないようにタンクを水平に保ってください。

1-2 補機類の取り外し


ターボチャージャーに固定されている補機類や遮熱板、センサーなどを取り外してください。

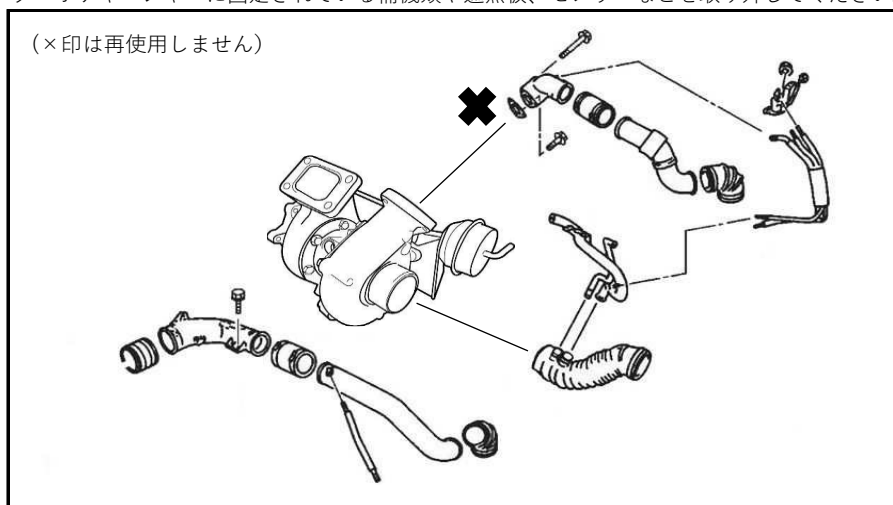

1-3.ターボチャージャーの取り外し

ウォーターチューブおよびオイルチューブ（各フィード側、リターン側）を外し、ターボチャージャーを取り外してください。

- ① ウォーターチューブ（リターン側）を(図①)の状態で取り外すため、エキゾーストマニホールドの横 (図②) とシリンダーヘッドの後ろ側 (図③) で固定されているステー部分を取り外す。
- ② サージタンク横のステーを外した後、サージタンク後ろ側につながっているゴムホースを外し、ウォーターチューブ（リターン側）を引き抜く。
- ③ ウォーターチューブ（リターン側）に使用されているゴムホースを取り外しておく。

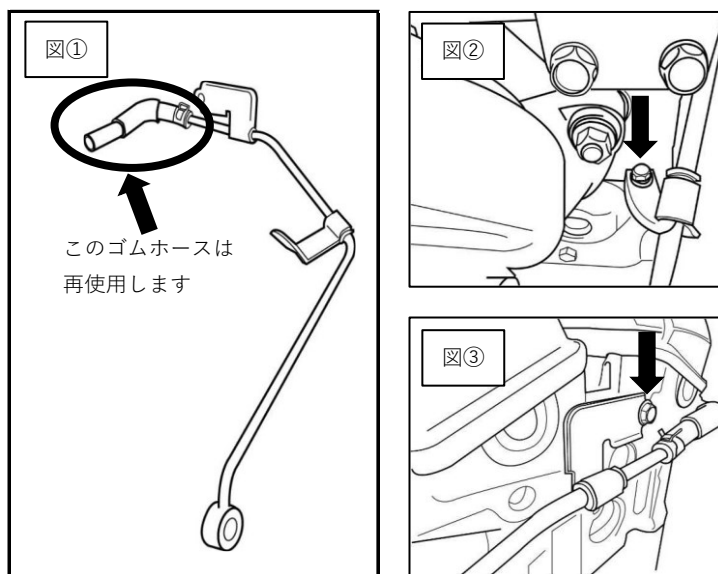


2. ARMSターボチャージャーの取り付け



■ 排気系の高温にさらされるボルトには焼付きや固着を防止するため、付属のボルトスムースペーストを塗布してください。


2-1. 準備作業

- ① エンジンブロックにオイルと冷却水取り出しのフィッティングを取り付ける。

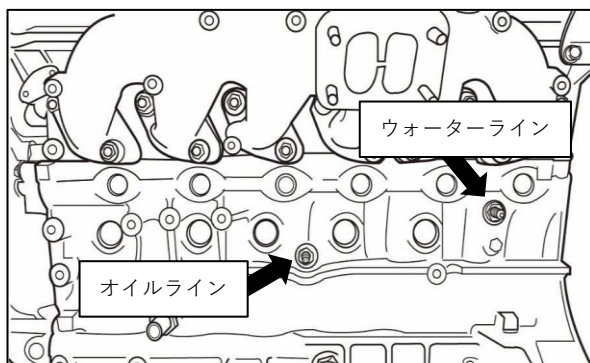

使用箇所	部品番号	名称	数量	部品締付けトルク
オイルライン	⑦	フィッティング M12 P1.25 4AN	1	$T=31 \pm 2N \cdot m$
	④	ワッシャー M12	1	
ウォーターライン	⑯	フィッティング M14 P1.5 4AN	1	$T=42 \pm 7N \cdot m$
	⑫	ワッシャー M14	1	


- ② ターボチャージャーにスタッドボルトを取り付ける。

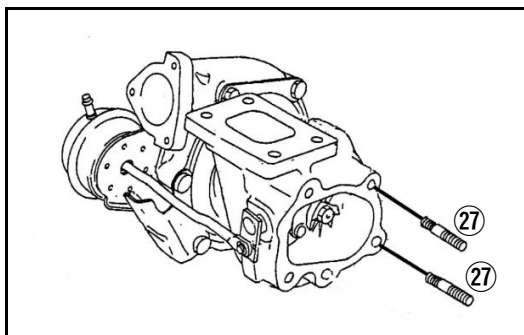

部品番号	名称	数量
②⑦	スタッドボルトM8 P1.25 35mm	2



スタッドボルトの取り付け向きに注意




短

長

- 短い方をターボ側にしてください。
- ダブルナットを使用し、締め付けてください。
ナットを取り外す際はボルトが緩まないように注意してください。緩んだ場合は再度やり直してください。

③ ウォーターリターンホースを準備する

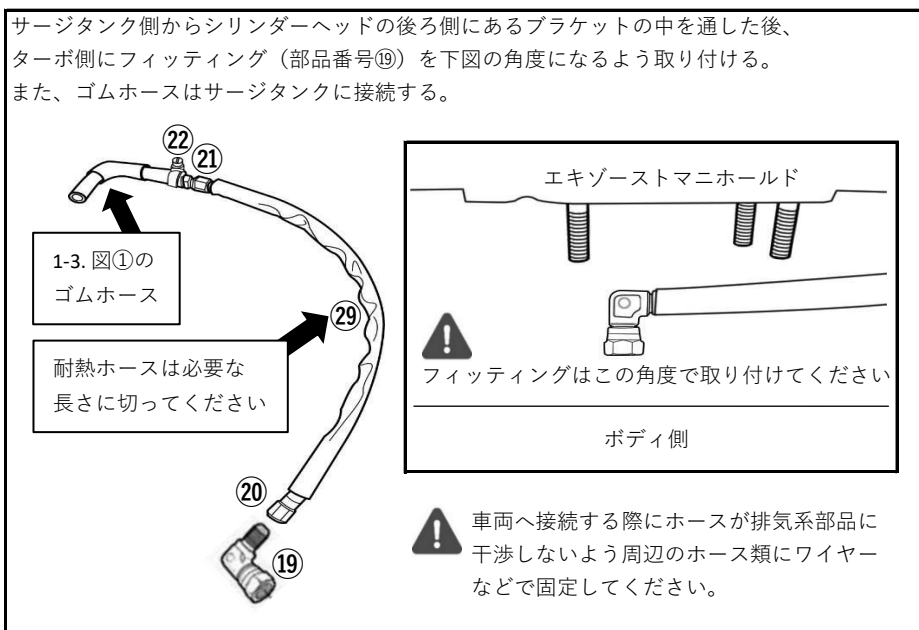

部品番号	名称	数量
⑳	メッシュホース 470mm	1
㉑	フィッティング 11mm 4AN	1
㉒	ホースバンド 7-16mm	1
㉓	耐熱ホース	1
⑱	フィッティング 4AN M to F 90°	1

2-2.取付箇所と締付けトルク



取り付け位置などを間違わないようにしてください。間違えるとエンジン本体への取り付けができなかったり、冷却や潤滑不良を起こしてタービンが破損します。

2-2-1. ウォーターライン（リターン） ※前項参照




部品番号	名称	数量
⑰	フィッティング M14 P1.5 4AN	1
⑱	ワッシャー-M14	1
⑲	フィッティング 4AN M to F 90°	1
⑳	メッシュホース 470mm	1
㉑	フィッティング 11mm 4AN	1
㉒	耐熱ホース	1

	部品締付けトルク
<1>	T=42±7N・m


※必要に応じて耐熱ホースをカットしてメッシュホースの遮熱をしてください。

2-2-2. ウォーターライン（フィード）

ターボ側

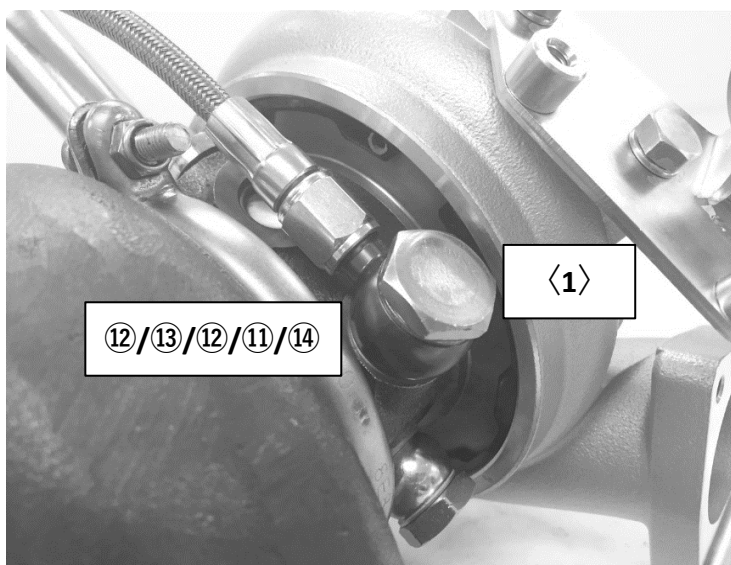

車体側

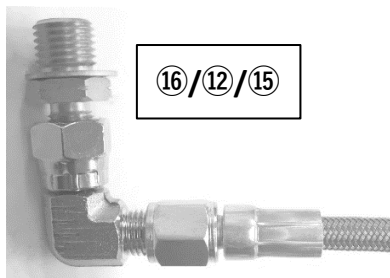


部品番号	名称	数量
⑪	ウォーターボルト M14 P1.5	1
⑫	ワッシャーM14	3
⑬	バンジョーフィッティング M14 4AN	1
⑭	メッシュホース 380mm	1
⑮	フィッティング 4AN M to F 90°	1
⑯	フィッティング M14 P1.5 4AN	1
⑲	耐熱ホース	1

	部品締付けトルク
<1>	$T=42 \pm 7 \text{ N} \cdot \text{m}$


※必要に応じて耐熱ホースをカットしてメッシュホースの遮熱をしてください。

2-2-3. オイルライン（フィード）

ターボ側

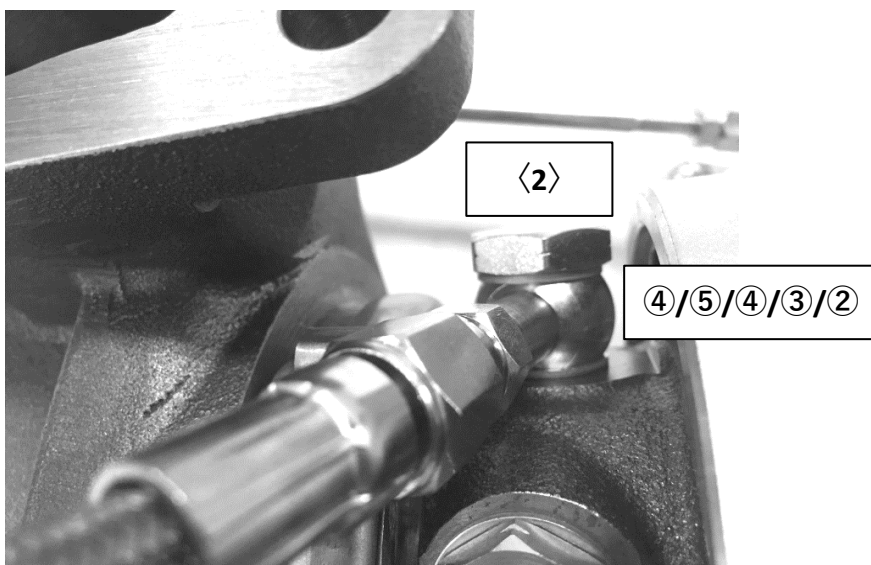

車体側

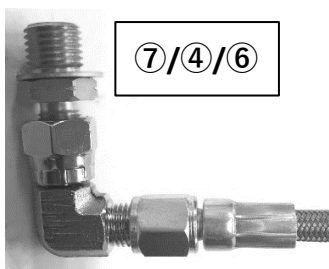


部品番号	名称	数量
②	メッシュホース 160mm	1
③	バンジョーボルト M12	1
④	ワッシャー M12	3
⑤	バンジョーフィッティング M12 4AN	1
⑥	フィッティング 4AN M to F 90°	1
⑦	フィッティング M12 P1.25 4AN	1
②⑨	耐熱ホース	1

	部品締付けトルク
<2>	$T=31 \pm 2 \text{ N} \cdot \text{m}$

※必要に応じて耐熱ホースをカットしてメッシュホースの遮熱をしてください。


2-2-4. オイルライン (リターン)

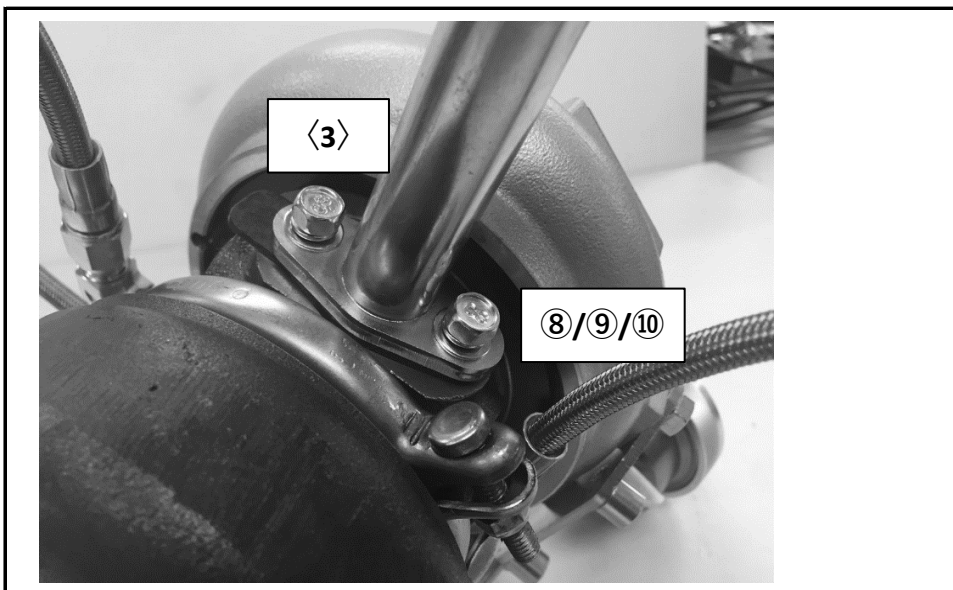

部品番号	名称	数量
⑧	オイルリターンガスケット	1
⑨	オールドレインパイプ	1
⑩	ボルト M6 P1.0 16mm	2

	部品締付けトルク
<3>	$T=9 \pm 1 \text{ N} \cdot \text{m}$

2-2-5. 周辺部品

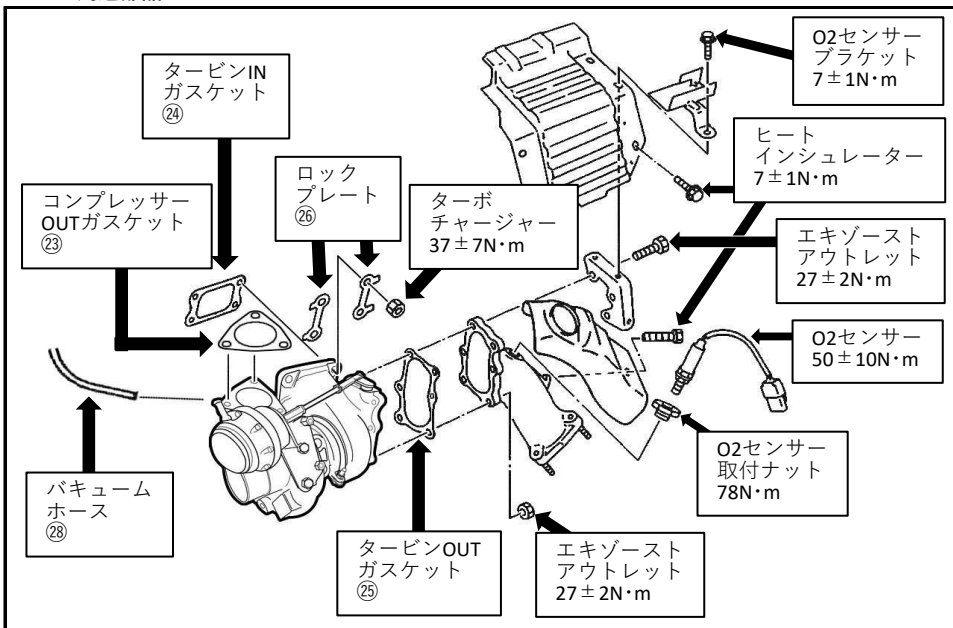


2-3.ターボチャージャーの取り付けと各部の復帰作業


前項の各部の部品構成およびトルクを確認し、取り付けを行ってください。

- ① オイルドレインパイプ（部品番号⑨）と、フィッティング（部品番号⑰）を、付属のワッシャーを使用し、ターボチャージャーに取り付ける。
- ② 付属のタービンOUTガスケット（部品番号⑳）を使用し、遮熱板ステーを共締めしてアウトレットパイプをターボチャージャーに取り付ける。
- ③ ターボチャージャーをエキゾーストマニホールドとボディの間から通し、オイルドレインパイプを車両側のホースに挿入した後、付属のタービンINガスケット（部品番号㉑）、ロックプレート（部品番号㉒）を使用しタービンとエキゾーストマニホールドを接続する。ナットを締め付けた後、ロックプレートにてナットを固定する。
- ④ シリンダヘッド裏側から通していたウォーターリターンホースをターボチャージャーに接続する。
- ⑤ タービンに繋がる各ホースに耐熱ホース（部品番号㉓）を使用し、下図のような角度で干渉がないように取り付け。

〈オイルフィード〉

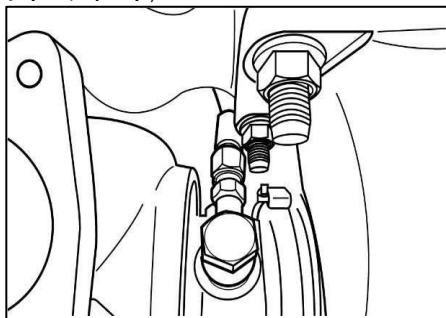


ターボチャージャーにオイルフィード部を取り付ける

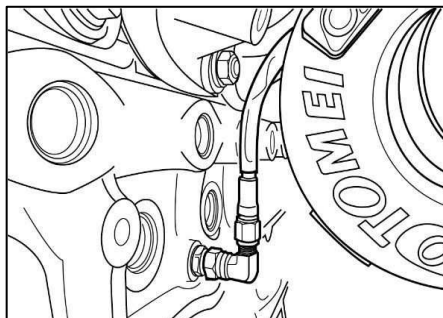


エンジンブロックに取り付けておいたフィッティングにホース類を接続する

〈ウォーターフィード〉

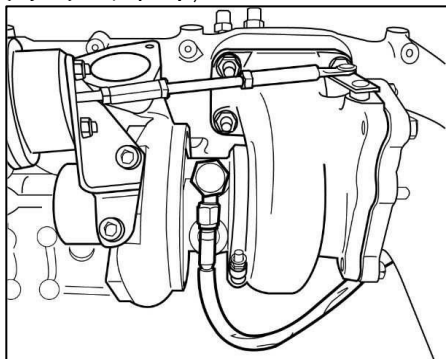

ターボチャージャーにウォーターフィード部を取り付ける

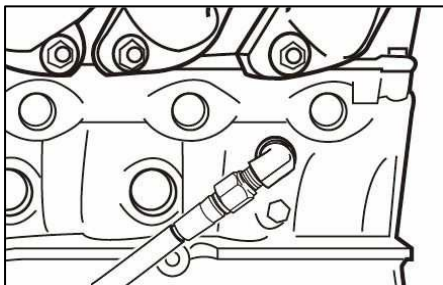

エンジンブロック側に付けておいたフィッティングにホース類を接続する



無理のない配管レイアウトになるよう取付角度や取り回しを調整してください。

3. 冷却水とオイルの補充

ターボチャージャー交換作業で不足した冷却水とオイルを補充してください。
補充方法や交換部品などは整備要領書を参照し、確実に補充してください。

4. 本運用前の点検と使用上の注意

- ① ギアをニュートラルにし、サイドブレーキを確認してください。
- ② エンジンを始動せず、15秒程クランキングを繰り返してください。
- ③ エンジンを始動し、アイドリング状態で冷却水やオイルが漏れ出ていないことを確認してください。
- ④ エンジンを停止し、冷却水とオイルが規定量入っていることを確認してください。
また、リザーブタンクも同様に確認してください。
- ⑤ 再度エンジンを始動し、エンジン回転を3000回転程度まで上げ、排気漏れや異音がしないことを確認してください。
- ⑥ 試運転を行い、過給がかかることを確認してください。



- 出荷時のアクチュエーターの設定過給圧はアクチュエーター単体で2mmのプリロードをかけた状態で1.0kgです。
- 実際の過給圧の設定は1次排圧の影響や他の部品の仕様により大きく異なる場合があります。過給圧の決定はブーストコントローラーを併用のうえ、実走に等しい環境で確認しながら慎重に行ってください。
- アクチュエータースプリングの交換は別冊のアクチュエーター取扱説明書を参照のうえ、慎重に行ってください。
- ブースト計を使用し、過給圧を監視してください。

- ⑦ 各部の取り付け状態や冷却水/オイル漏れの点検を行ってください。



- 高負荷運転の直後はすぐにエンジンを停止しないでください。
- エンジンオイルを定期的に交換してください。

5. ターボチャージャー仕様

コンプレッサーホイール					
入口径 (mm)	外径 (mm)	トリム	ブレード数	材質	製法
54.8	76.2	52	6	A2618	CNC削出

タービンホイール					
出口径 (mm)	外径 (mm)	トリム	ブレード数	材質	製法
58.8	67.0	77	12	K418	鋳造

コンプレッサーハウジング			タービンハウジング		
入口径 (mm)	出口径 (mm)	A/R	入口	出口	A/R
55.8	42.6	0.57	T3	RB25DET	0.57

6.アクチュエータースプリング

本製品はアクチュエータースプリングを交換することで、ブースト設定値を変更することができます。下記を参考に目的に合ったアクチュエータースプリングを選択してください。



アクチュエータースプリングの選択について

次ページ一覧表に記載の各スプリングの単体圧力/設定圧力はアクチュエーターが動作し、スイングバルブが開き始める圧力となっています。

実際のスプリング選択は目的に合わせ実測したうえで設定してください。

交換方法などは別紙のアクチュエーター取扱説明書を参照してください。

※ 次ページ一覧表の数値はアクチュエーター単体で2mmのプリロードをかけた状態での数値です。

※ 出荷時の本製品には次ページ一覧表の1.0kgf/cm²の組み合わせのスプリングが装着されています。

※ 次ページ一覧表の設定値はあくまでも目安です。ブースト値は車両の仕様により変化します。

※ 実際のブースト値の設定はブーストコントローラーを併用してください。
ブーストコントローラーの設定を主とし、アクチュエーターを補助として調整することで、安定したブーストセッティングが可能となります。

アクチュエータースプリング選択方法の一例



- アクチュエーターを動かさないように固定する。
- 計測器（マイクロメーターなど）アクチュエーターロッドのトラベル量が計測できるようセットする
- 圧力計を通してアクチュエーターにエアを入れる
- 計測器の動きでアクチュエーターの動作圧力を確認する。
- 本書のアクチュエータースプリング一覧表を参考に目的にあったスプリングに入れ替える

スプリング 単体圧力	kgf/cm ²	0.20	0.4	0.6	0.9	0.65	0.75
	Kpa	19.61	39.23	58.84	88.26	63.74	73.55
	PSI	2.84	5.69	8.53	12.80	9.25	10.67
設置位置		インナー	インナー	ミドル	ミドル	アウター	アウター
品番		TB401B -SPR07	TB401B -SPR08	TB401B -SPR09	TB401B -SPR10	TB401B -SPR11	TB401B -SPR12
識別色		黒	銀	紫	赤	ピンク	青
サイズ	外径 mm	29	29	36.5	36.5	44	44
	長さ mm	32	36	43	52	57	68
設定圧力							
kgf/cm ²	Kpa	PSI					
0.20	19.61	2.84	0.20				
0.40	39.23	5.69		0.40			
0.60	58.84	8.53			0.60		
0.65	63.74	9.25				0.65	
0.75	73.55	10.67					0.75
0.80	78.45	11.38	0.20		0.60		
0.85	83.36	12.09	0.20			0.65	
0.90	88.26	12.80				0.90	
0.95	93.16	13.51	0.20				0.75
1.00	98.07	14.22		0.40	0.60		
1.05	102.97	14.93		0.40		0.65	
1.10	107.87	15.65	0.20			0.90	
1.15	112.78	16.36		0.40			0.75
1.25	122.58	17.78			0.60	0.65	
1.30	127.49	18.49		0.40		0.90	
1.35	132.39	19.20			0.60		0.75
1.45	142.20	20.62	0.20		0.60	0.65	
1.55	152.00	22.05	0.20		0.60		0.75
1.55	152.00	22.05				0.90	0.65
1.65	161.81	23.47		0.40	0.60		0.65
1.65	161.81	23.47				0.90	0.75
1.75	171.62	24.89	0.20			0.90	0.65
1.75	171.62	24.89		0.40	0.60		0.75
1.85	181.42	26.31	0.20			0.90	0.75
1.95	191.23	27.74		0.40		0.90	0.65
2.05	201.04	29.16		0.40		0.90	0.75

セットアップガイド

項目	推奨仕様	
	ノーマルエンジン	鍛造ピストン交換など
過給圧設定	1.0～1.2kgf/cm ² (14.2～17.1psi) ブーストコントローラー使用	1.6kgf/cm ² (22.8psi) ブーストコントローラー使用
想定馬力	約350～370ps	約450ps
カムシャフト	ノーマル～高作用角 推奨：TOMEI PONCAM	広作用角への変更が必要 推奨：TOMEI PONCAM
ヘッドガスケット	メタル強化タイプ 推奨：TOMEIメタルヘッドガスケット	
インジェクター	550cc以上 目標馬力×5.9÷気筒数＝1気筒あたりが必要とする毎分吐出量	
燃料ポンプ	240L/h以上 推奨：TOMEI 255L/h インジェクター容量×気筒数×0.06＝必用とする毎時吐出量	
燃圧レギュレーター	燃圧調整式 推奨：TOME TYPE-S	
エアクリーナー	高効率タイプ	
サクションパイプ	ノーマル～大容量タイプ	大容量タイプ
インタークーラー	ノーマル～大容量タイプ	大容量タイプ
エキゾーストマニホールド	ノーマル	ノーマル～大容量タイプ
タービンアウトレットパイプ	ノーマル～大容量タイプ 推奨：TOMEI EXPREME	大容量タイプ 推奨：TOMEI EXPREME
フロントパイプ	ノーマル～大容量タイプ	大容量タイプ
触媒	スポーツ触媒	
マフラー	メインパイプ径Φ80～Φ90相当	
ECU	現車合わせ	
ブローオフバルブ	強化品（大気解放不可）	
プラグ	8～9番相当	



このセットアップガイドはあくまでも目安となるものです。

実際のパーツ選定・セットアップは用途や他の仕様に合わせて選択してください。



CAUTION

- This installation manual contains important information regarding this product.
For details regarding the assembly/disassembly of stock components, please refer to the vehicle's official servicing manual.
- This product is intended for motorsport use and should only be used on a racing circuit or a circuit closed off from public roads.
- Installing this product will increase the engine's power output. After installation, the engine management system and other surrounding components will need to be adjusted accordingly.
- Ensure you consistently monitor the turbo's performance using gauges and/or similar devices.



WARNING

- Only install this product on the specified vehicles to avoid damaging the product and/or engine.
- This product should be installed by a trained professional in a well-equipped workshop.
- Ensure you use the appropriate tools and safety gear when installing this product.
Failing to do so may result in injury.
- Install this product only when the engine is cool and/or cold to avoid potential fire hazards.
- Ensure you use the correct specified torque for each fastening. Do not use excessive force when attaching or removing components as this may damage the product and/or engine.
- After starting the engine, thoroughly check to ensure that there are no oil/coolant leaks.
Leaking oil/coolant can lead to engine damage.

REQUIRED TOOLS FOR INSTALLATION

- General engine maintenance tools
- Torque wrench
- Official servicing manual

KIT CONTENTS

Check to ensure all the following items are included in this kit.

①			COMPONENT(S)	P/N
			CHRA	TB401B-CRA10
			REBUILD KIT	TB401B-RBK01
			ACTUATOR	TB401B-ACT07
			COMPRESSOR HOUSING	TB401B-COH10
			COMPRESSOR WHEEL	TB401B-COW07
	PART	TURBOCHARGER UNIT	TURBINE HOUSING	TB401B-TBH11
	QTY.	1	TURBINE WHEEL	TB401B-TBW06


OIL FEED


②		
	PART	MESH HOSE 160mm
	QTY.	1
	P/N	TB401B-OFP15

③		
	PART	BANJO BOLT M12
	QTY.	1
	P/N	TB401B-BJB02

④		
	PART	WASHER M12
	QTY.	3
	P/N	TB401B-WAS04

⑤		
	PART	BANJO FITTING M12 4AN
	QTY.	1
	P/N	TB401B-FIT10

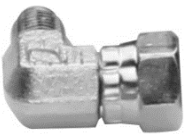⑥		
	PART	FITTING 4AN M to F 90°
	QTY.	1
	P/N	TB401B-FIT01

⑦		
	PART	FITTING M12XP1.25 4AN
	QTY.	1
	P/N	TB401B-FIT07

KIT CONTENTS

Check to ensure all the following items are included in this kit.

OIL RETURN

⑧		
	PART	OIL RETURN GASKET
	QTY.	1
	P/N	TB401B-ORG01


⑨		
	PART	OIL DRAIN PIPE
	QTY.	1
	P/N	TB401B-ODP07

⑩		
	PART	BOLT M6 P1.0 16mm
	QTY.	2
	P/N	TB401B-WBT01

KIT CONTENTS

Check to ensure all the following items are included in this kit.


WATER FEED

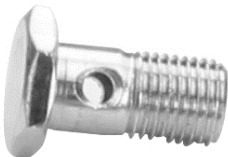
⑪		
	PART	WATER BOLT M14 P1.5
	QTY.	1
	P/N	TB401B-WTB01

⑫		
	PART	WASHER M14
	QTY.	3
	P/N	TB401B-WAS02

⑬		
	PART	BANJO FITTING M14 4AN
	QTY.	1
	P/N	TB401B-FIT21

⑭		
	PART	MESH HOSE 380mm
	QTY.	1
	P/N	TB401B-OF07

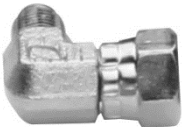
⑮		
	PART	FITTING 4AN M to F 90°
	QTY.	1
	P/N	TB401B-FIT01

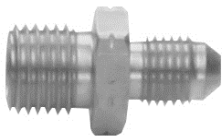⑯		
	PART	FITTING M14 P1.5 4AN
	QTY.	1
	P/N	TB401B-FIT08


KIT CONTENTS

Check to ensure all the following items are included in this kit.

WATER RETURN

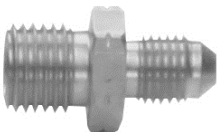⑰		
	PART	FITTING M14 P1.5 4AN
	QTY.	1
	P/N	TB401B-FIT08

⑱		
	PART	WASHER M14
	QTY.	1
	P/N	TB401B-WAS02

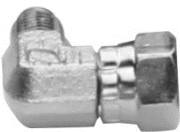⑲		
	PART	FITTING 4AN M to F 90°
	QTY.	1
	P/N	TB401B-FIT01

⑳		
	PART	MESH HOSE 470mm
	QTY.	1
	P/N	TB401B-OF08

㉑		
	PART	FITTING 11mm 4AN
	QTY.	1
	P/N	TB401B-FIT22


㉒		
	PART	HOSE BAND 7-16mm
	QTY.	1
	P/N	TB401B-HBD06

KIT CONTENTS

Check to ensure all the following items are included in this kit.

OTHER HARDWARE

23		
	PART	COMPRESSOR OUT GASKET
	QTY.	1
	P/N	TB401B-COG05

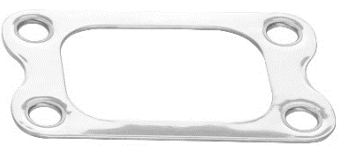24		
	PART	TURBINE IN GASKET
	QTY.	1
	P/N	TB401B-TIG05

25		
	PART	TURBINE OUT GASKET
	QTY.	1
	P/N	TB401B-TOG07

26		
	PART	LOCK PLATE
	QTY.	2
	P/N	TB401B-LKP02

27		
	PART	STUD BOLT M8 P1.25 35mm / 18-10.5mm
	QTY.	2
	P/N	TB401B-STB04

28		
	PART	VACUUM HOSE 5X11mm
	QTY.	1
	P/N	TB401B-SLH03

29		
	PART	HEAT RESISTANT HOSING
	QTY.	1
	P/N	TB401B-TIT01

KIT CONTENTS

Check to ensure all the following items are included in this kit.

MISC.


③①		
	PART	BOLT SMOOTH PASTE
	QTY.	1
	P/N	PB6150-BSP01

③②		
	PART	ACTUATOR SPRING BLACK
	QTY.	1
	P/N	TB401B-SPR07

③③		
	PART	ACTUATOR SPRING RED
	QTY.	1
	P/N	TB401B-SPR10

③④		
	PART	ACTUATOR SPRING PINK
	QTY.	1
	P/N	TB401B-SPR11

③⑤		
	PART	ACTUATOR SPRING BLUE
	QTY.	1
	P/N	TB401B-SPR12

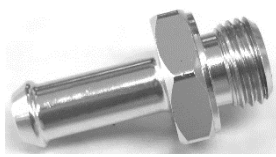③⑥		
	PART	ACTUATOR NIPPLE (STRAIGHT)
	QTY.	1
	P/N	TB401B-SAN01

③⑦		
	PART	TOMEI STICKER
	QTY.	2
	P/N	TG201A-0000A

③⑧		
	PART	ARMS STICKER
	QTY.	2
	P/N	TG204A-0000A

KIT CONTENTS

Check to ensure all the following items are included in this kit.

MISC.

③⑧		
	PART	EMBLEM
	QTY.	1
	P/N	TE501A-0000A

③⑨		
	PART	TURBO MANUAL
	QTY.	1
	P/N	

④①		
	PART	ACTUATOR MANUAL
	QTY.	1
	P/N	

④②		
	PART	SPEC. SHEET
	QTY.	1
	P/N	-

④③		
	PART	WARRANTY REG. CARD
	QTY.	1
	P/N	-

④④		
	PART	WARRANTY REG. NOTES
	QTY.	1
	P/N	-

④⑤		
	PART	BOOST SETTING CAUTION
	QTY.	1
	P/N	-

1. REMOVING THE STOCK TURBOCHARGER

Disconnect the negative battery terminal. Then, remove the turbocharger and surrounding components.



- For further details, please refer to the official servicing manual.
- Take care not to damage the components/parts as some of these will be reused later.
- Ensure you seal all openings with tape to prevent debris from entering the system.

1-1. PREPARATION


- ① Remove the under cover center
- ② Drain the engine oil/coolant.
- ③ Remove the front pipe and strut tower bar.
- ④ Disconnect the MAF coupler and remove the air cleaner.
- ⑤ Remove the power steering fluid tank (together with bracket).



Keep the power steering fluid level to avoid spills.

1-2. REMOVING THE SURROUNDING COMPONENTS




Remove/disconnect any parts connected to the turbocharger such as heat shields and sensors.

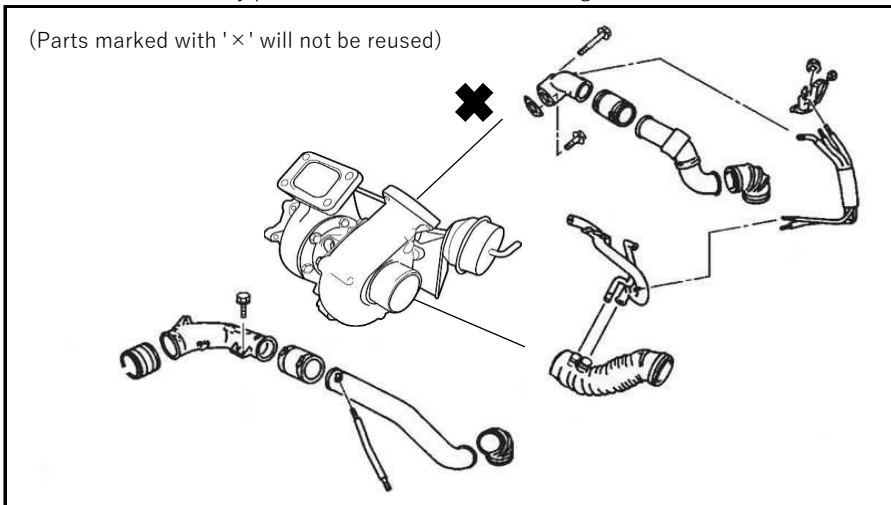

1-3. REMOVING THE TURBOCHARGER

Remove the water and oil tubes (feed and return).
Then remove the turbocharger unit.

- ① To remove the water return tube as shown in FIG. ①. below, first detach the brackets by the side of the exhaust manifold (FIG. ②) and the rear of the cylinder head (FIG. ③).
- ② Then, detach the bracket by the side of the intake plenum and disconnect the rubber hose connected to the back of it. Now remove the water return tube completely.
- ③ Remove the rubber hose attached to the water return tube.

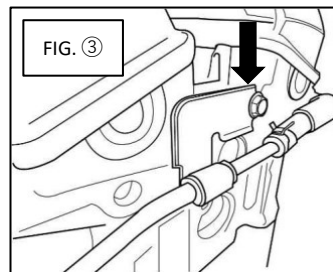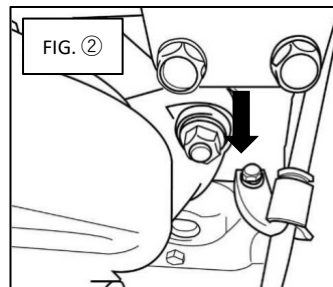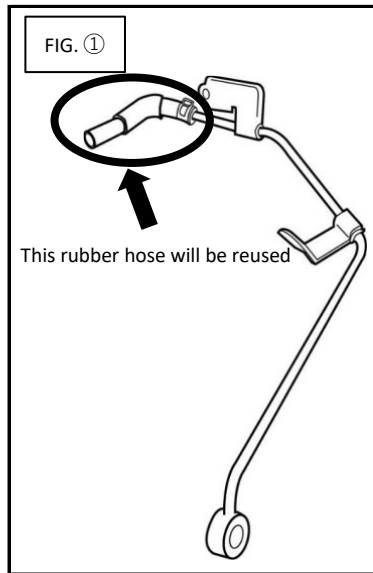


2. INSTALLING THE ARMS TURBOCHARGER



- Apply the included Bolt Smooth Paste to all bolts exposed to heat from the exhaust.
This helps prevent these bolts from becoming seized.


2-1. PREPARATION

- ① Attach the fittings to the oil and water routes on the cylinder the block.

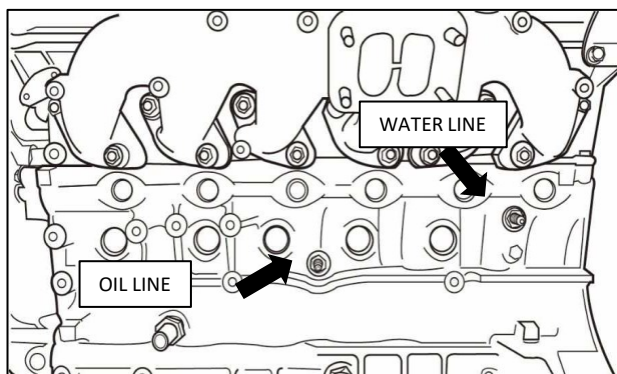

LOCATION	REF. NO.	PART	QTY.	TORQUE SPECS,
OIL LINE	⑦	FITTING M12 P1.25 4AN	1	$T=31 \pm 2N \cdot m$
	④	WASHER M12	1	
WATER LINE	⑩	FITTING M14 P1.5 4AN	1	$T=42 \pm 7N \cdot m$
	⑫	WASHER M14	1	


- ② Attach the stud bolts to the turbocharger.

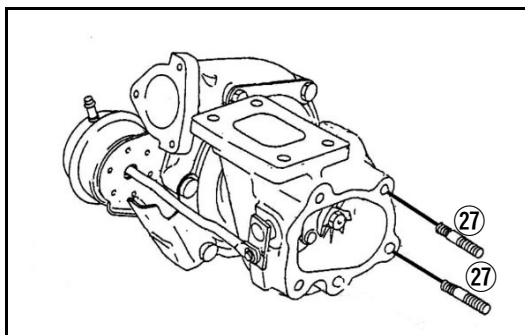

REF. NO.	PART	QTY.
②⑦	STUD BOLT M8 P1.25 35mm	2




NOTE THE ORIENTATION OF THE STUD BOLTS



SHORT LONG

- SHORT END TO TURBO
- Install using the 'double nut' method (nuts included).
Ensure the stud bolt does not move when removing the nuts.

③ Prepare the water return hose.

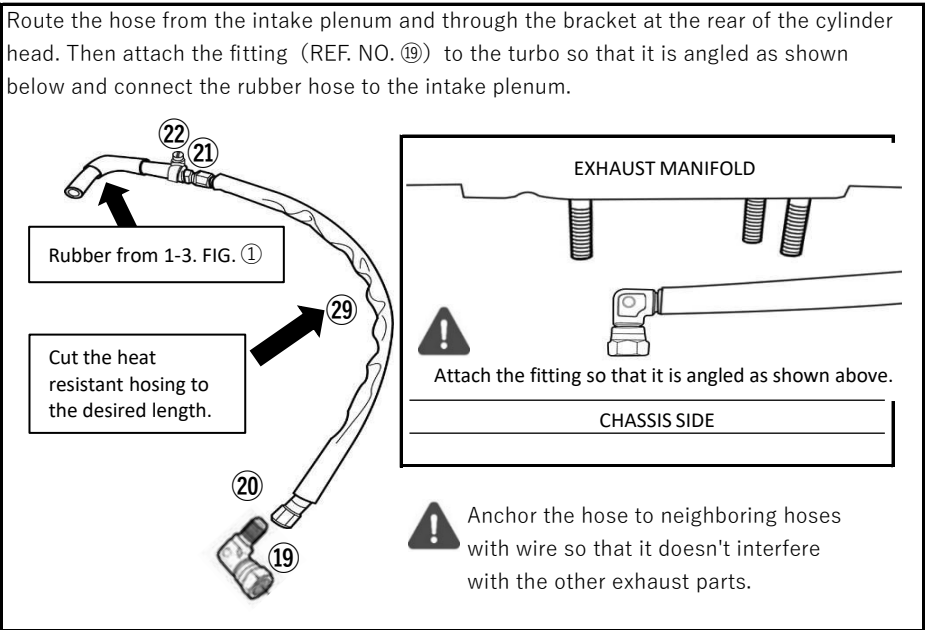

REF. NO.	PART	QTY.
⑳	MESH HOSE 470mm	1
㉑	FITTING11mm 4AN	1
㉒	HOSE BAND 7-16mm	1
㉓	HEAT RESISTANT HOSING	1
㉔	FITTING4AN M to F 90°	1


2-2. FITTING & TORQUE SPECS.



Ensure each part is fitted/assembled correctly. Failing to do so may prevent you from completing the installation and can even cause damage to the turbo through insufficient cooling/lubrication.

2-2-1. WATER RETURN LINE

※SEE PREVIOUS PAGE

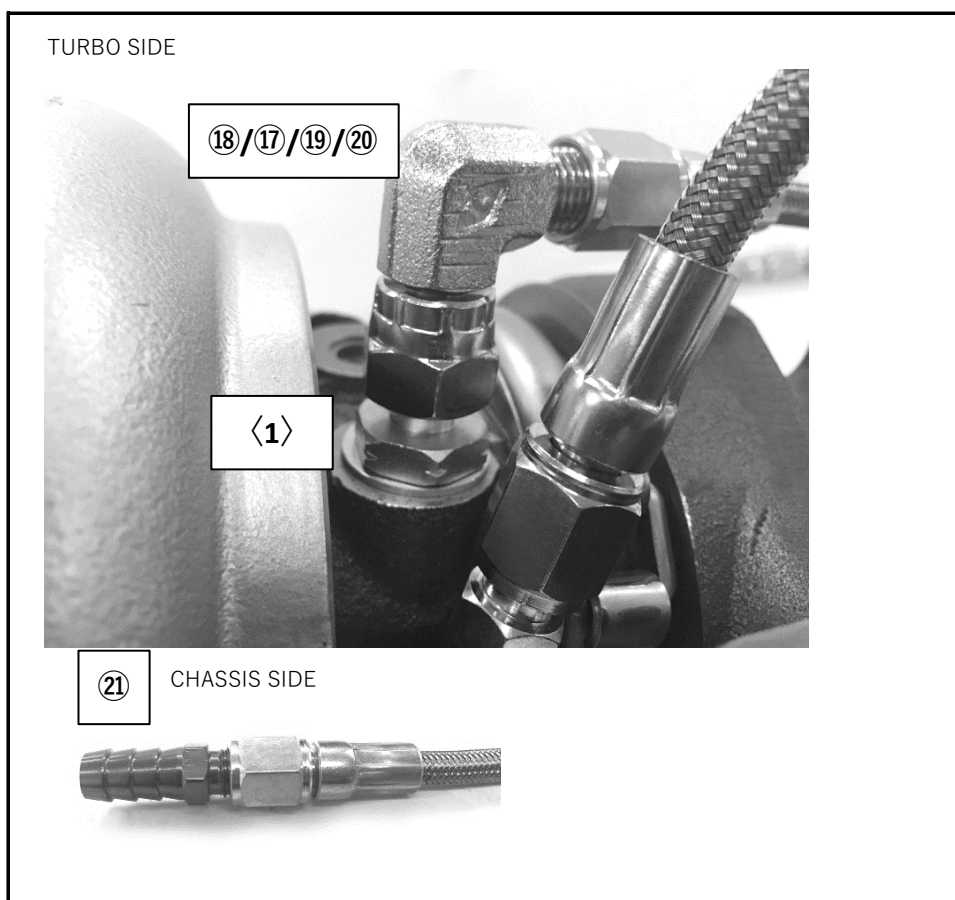


REF. NO.	PART	QTY.
⑰	FITTINGM14 P1.5 4AN	1
⑱	WASHERM14	1
⑲	FITTING4AN M to F 90°	1
⑳	MESH HOSE 470mm	1
㉑	FITTING11mm 4AN	1
㉓	HEAT RESISTANT HOSING	1

	TORQUE SPECS,
<1>	T=42 ± 7N · m


※Cut the heat resistant hosing to the desired length and use it to protect the mesh hose.

2-2-2. WATER FEED LINE

TURBO SIDE

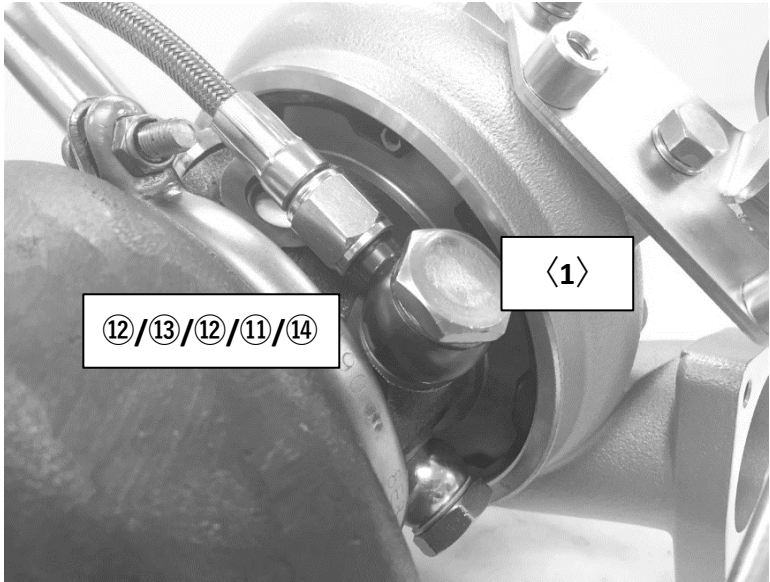

CHASSIS SIDE

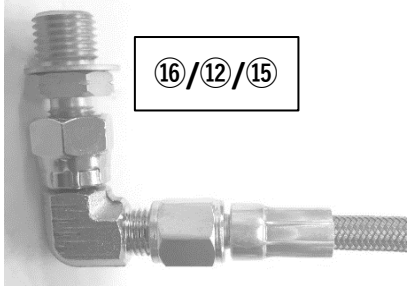


REF. NO.	PART	QTY.
⑪	WATER BOLT M14 P1.5	1
⑫	WASHERM14	3
⑬	BANJO FITTING M14 4AN	1
⑭	MESH HOSE 380mm	1
⑮	FITTING 4AN M to F 90°	1
⑯	FITTING M14 P1.5 4AN	1
⑲	HEAT RESISTANT HOSE	1

	TORQUE SPECS,
<1>	T=42 ± 7N · m


※Cut the heat resistant hosing to the desired length and use it to protect the mesh hose.

2-2-3. OIL FEED LINE

TURBO SIDE

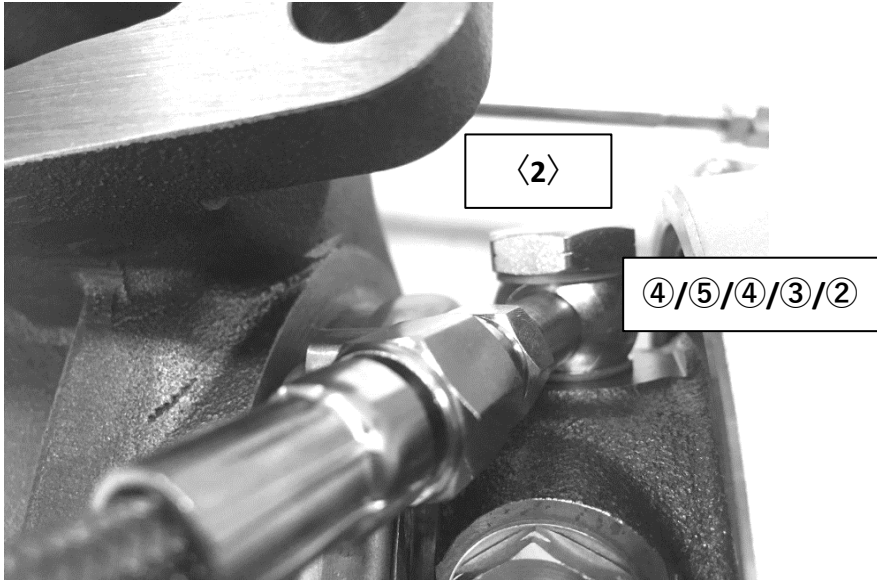

CHASSIS SIDE

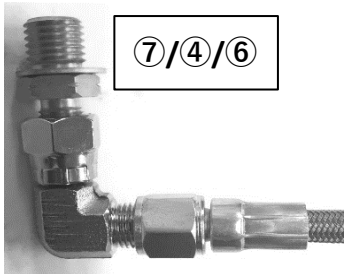


REF. NO.	PART	QTY.
②	MESH HOSE 160mm	1
③	BANJO BOLT M12	1
④	WASHER M12	3
⑤	BANJO FITTING M12 4AN	1
⑥	FITTING 4AN M to F 90°	1
⑦	FITTING M12 P1.25 4AN	1
②⑨	HEAT RESISTANT HOSE	1

	TORQUE SPECS,
< 2 >	T=31 ± 2N · m


※Cut the heat resistant hosing to the desired length and use it to protect the mesh hose.

2-2-4. OIL RETURN LINE

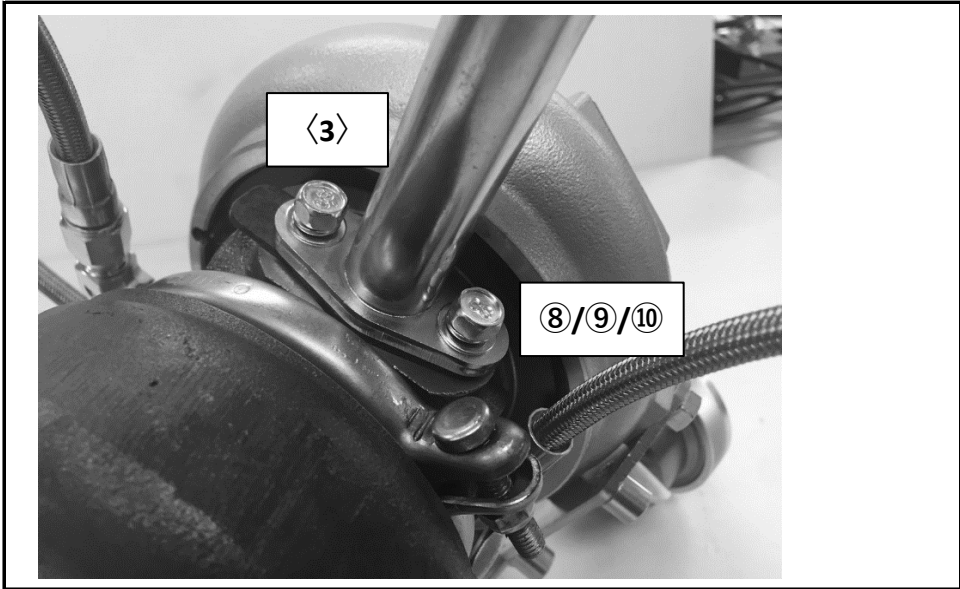

REF. NO.	PART	QTY.	TORQUE SPECS.	
⑧	OIL RETURN GASKET	1	<3>	$T=9 \pm 1 \text{ N} \cdot \text{m}$
⑨	OIL DRAIN PIPE	1		
⑩	BOLT M6 P1.0 16mm	2		

2-2-5. SURROUNDING COMPONENTS

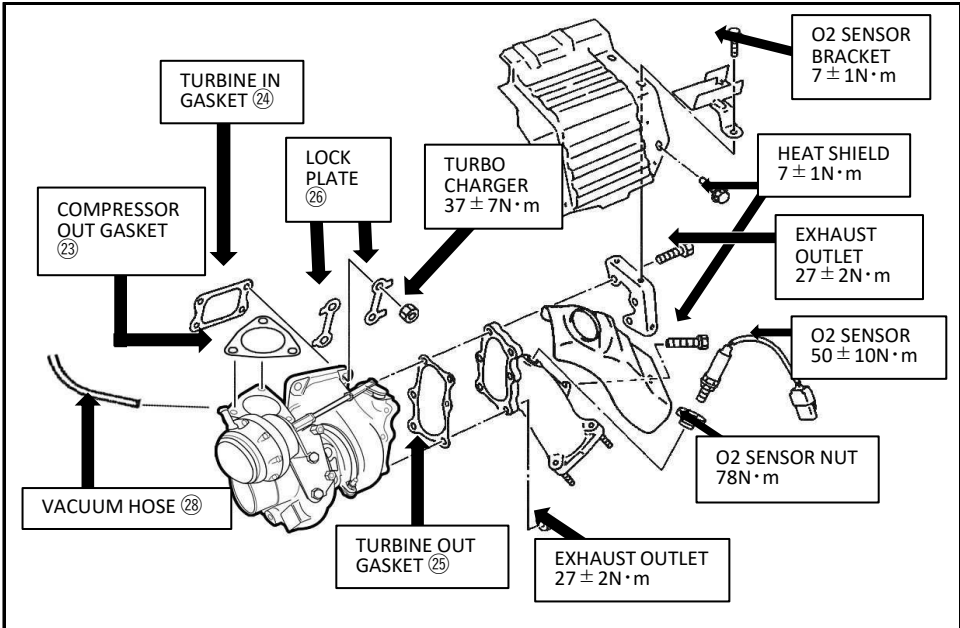


2-3. INSTALLING THE TURBOCHARGER & REINSTALLING THE SURROUNDING COMPONENTS


During installation, refer to the previous page to check parts positioning and torque specs.

- ① Attach the oil drain pipe (REF. NO. ⑨) and fitting (REF. NO. ⑰) to the turbocharger using the included washers.
- ② Attach the outlet pipe (together with the heat shield bracket) to the turbo charger using the included turbine out gasket (REF. NO. ⑳).
- ③ Carefully pass the turbocharger between the exhaust manifold and chassis, then connect the oil drain pipe to the engine side hose. Next, secure the turbocharger to the exhaust manifold using the included turbine IN gasket (REF. NO. ㉑) and lock plates (REF. NO. ㉒). After, tighten down the nuts on the lock plates.
- ④ Connect the water return hose (routed behind the cylinder head) to the turbo charger.
- ⑤ Use the heat resistant hosing (REF. NO. ㉓) to cover each hose connected to the turbocharger. Ensure you angle, route and connect the hoses as shown below to avoid interference.

〈OIL FEED〉

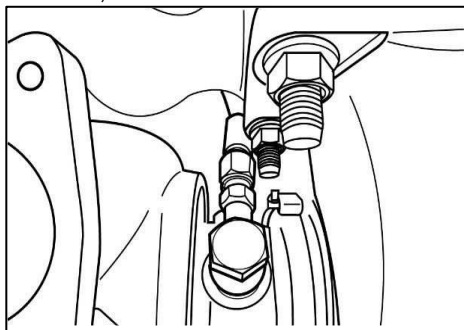


Attach the oil feed to the turbocharger.

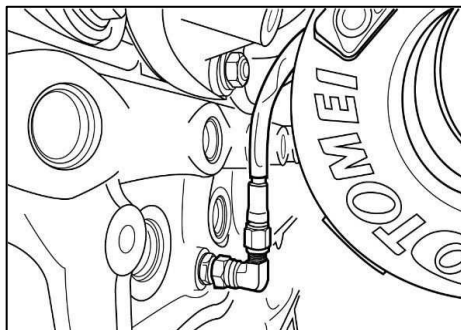


Connect the hose to the fitting on the cylinder block installed earlier.

〈WATER FEED〉

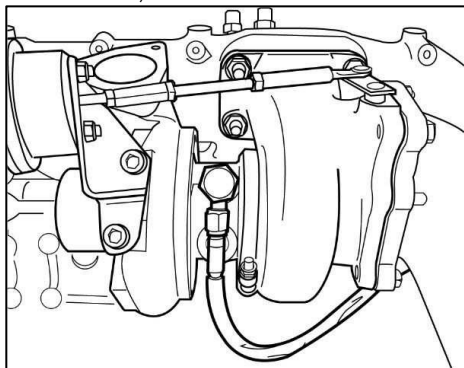

Attach the water feed to the turbocharger.

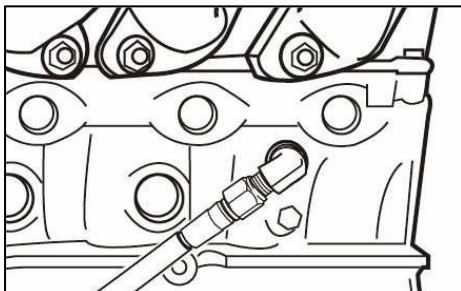

Connect the hose to the fitting on the cylinder block installed earlier.



Ensure you route the hoses so that they are free of any tension.

3. TOPPING UP THE ENGINE OIL AND COOLANT

Top up the engine oil and coolant as required.

For detailed instructions and information regarding replacement parts, please refer to the official servicing manual.

4. POST INSTALLATION CHECKS & PRECAUTIONS

- ① Ensure the vehicle is in neutral gear and check that the parking brake is engaged.
- ② Crank the engine for around 15 seconds but ensure you do not start the engine.
- ③ Start the engine and check for any signs of oil or coolant leaks during idle.
- ④ Stop the engine. Check to make sure that the oil and coolant are at acceptable levels.
Be sure to also check the coolant reservoir level.
- ⑤ Start the engine again and rev to 3000rpm. Thoroughly check for any exhaust leaks and/or abnormal sounds.
- ⑥ Test drive the vehicle and check to make sure that the turbo is generating pressure/boost.



- By default, the actuator (standalone) is configured to give 1.0kg spring pressure with 2mm of preload applied.
- The actual boost pressure will vary depending on pre-turbo back pressure as well as the surrounding components installed. A boost controller should be used in conjunction to make precise adjustments to boost pressure.
- For details on changing actuator springs, please refer to the included actuator manual.
- Ensure you monitor boost levels using a boost gauge.

- ⑦ Check to ensure all parts are fitted correctly and that there are no oil/coolant leaks.



- Do not turn the engine off immediately after hard driving.
- Ensure you periodically change the engine oil.

5. TURBOCHARGER SPECIFICATIONS

COMPRESSOR WHEEL					
INLET DIA. (mm)	OUTER DIA. (mm)	TRIM	BLADES	MATERIAL	CONSTRUCTION
54.8	76.2	52	6	A2618	CNC BILLET

TURBINE WHEEL					
EXIT DIA. (mm)	OUTER DIA. (mm)	TRIM	BLADES	MATERIAL	CONSTRUCTION
58.8	67.0	77	12	K418	FORGED

COMPRESSOR HOUSING			TURBINE HOUSING		
INLET DIA. (mm)	EXIT DIA. (mm)	A/R	INLET (mm)	EXIT	A/R
55.8	42.6	0.57	T3	RB25DET	0.89

6. ACTUATOR SPRINGS

This product features interchangeable actuator springs, allowing you to set different boost pressures. Use the following information as reference to choose the appropriate spring(s) for your setup.




CHOOSING ACTUATOR SPRINGS

The table on the next page shows the standalone pressure/spring rate of each spring. All pressure/spring rates were measured just as the internal wastegate begins to open. Always ensure you measure and choose the appropriate spring(s) for your particular setup. For details on how to change actuator springs, please refer to the separate actuator manual.

- ※ The table on the next page shows the standalone pressure/spring rate of each spring with 2mm of preload applied.
- ※ The included actuator ships preconfigured with 1.0kgf/cm² springs as shown in the table on the next page.
- ※ The table on the next page should be used for reference only as actual boost pressure will vary depending on the setup.
- ※ A boost controller should be used in conjunction to accurately adjust boost settings. For best results, the boost controller should be used as the main boost control device, with the actuator springs providing a secondary level of adjustment.

HOW TO CHOOSE ACTUATOR SPRINGS (EXAMPLE)

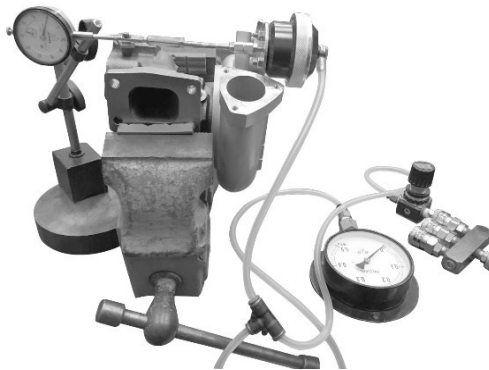

- Clamp/secure the actuator on a stable surface so that it doesn't move.
- Next, set up a dial indicator or similar tool so that you can accurately measure actuator rod travel.
- Using an air compressor and pressure gauge, apply air pressure to the actuator.
- Note the pressure at which the actuator rod begins to move.
- Then, use the following table to choose the appropriate spring(s) for your setup.

STANDALONE	kgf/cm ²	0.20	0.4	0.6	0.9	0.65	0.75
SPRING	Kpa	19.61	39.23	58.84	88.26	63.74	73.55
PRESSURE	PSI	2.84	5.69	8.53	12.80	9.25	10.67
POSITIONING		INNER	INNER	MIDDLE	MIDDLE	OUTER	OUTER
P/N		TB401B -SPR07	TB401B -SPR08	TB401B -SPR09	TB401B -SPR10	TB401B -SPR11	TB401B -SPR12
COLOR		BLACK	SILVER	PURPLE	RED	PINK	BLUE
SIZE	O.D (mm)	29	29	36.5	36.5	44	44
	LENGTH (mm)	32	36	43	52	57	68
CONFIGURED PRESSURE							
kgf/cm ²	Kpa	PSI					
0.20	19.61	2.84	0.20				
0.40	39.23	5.69		0.40			
0.60	58.84	8.53			0.60		
0.65	63.74	9.25				0.65	
0.75	73.55	10.67					0.75
0.80	78.45	11.38	0.20		0.60		
0.85	83.36	12.09	0.20			0.65	
0.90	88.26	12.80				0.90	
0.95	93.16	13.51	0.20				0.75
1.00	98.07	14.22		0.40	0.60		
1.05	102.97	14.93		0.40		0.65	
1.10	107.87	15.65	0.20			0.90	
1.15	112.78	16.36		0.40			0.75
1.25	122.58	17.78			0.60	0.65	
1.30	127.49	18.49		0.40		0.90	
1.35	132.39	19.20			0.60		0.75
1.45	142.20	20.62	0.20		0.60	0.65	
1.55	152.00	22.05	0.20		0.60		0.75
1.55	152.00	22.05				0.90	0.65
1.65	161.81	23.47		0.40	0.60	0.65	
1.65	161.81	23.47				0.90	0.75
1.75	171.62	24.89	0.20			0.90	0.65
1.75	171.62	24.89		0.40	0.60		0.75
1.85	181.42	26.31	0.20			0.90	0.75
1.95	191.23	27.74		0.40		0.90	0.65
2.05	201.04	29.16		0.40		0.90	0.75

SETUP GUIDE

CATEGORY	RECOMMENDATION	
	STOCK ENGINE	UPGRADED PISTONS ETC.
BOOST SETTING	1.0~1.2kgf/cm ² (14.2~17.1psi) with boost controller	1.6kgf/cm ² (22.8psi) with boost controller
POWER	350~370ps	450ps
CAMSHAFTS	Stock / longer duration Recommended: TOMEI PONCAM	Longer duration cams required Recommended: TOMEI PONCAM
HEAD GASKET	High performance, metal type Recommended: TOMEI METAL HEAD GASKET	
INJECTORS	550cc or larger Target horse power x 5.9 ÷ No. of cylinders=required injector capacity	
FUEL PUMP	240L/h or larger Recommendation: TOMEI 255L/h Injector capacity x No. of cylinders x 0.06=required fuel pump capacity	
FUEL PRESSURE REGULATOR	Adjustable type Recommended: TOMEI TYPE-S	
AIR CLEANER	High flow type	
SUCTION PIPE	Stock or high flow type	High flow type
INTERCOOLER	Stock or high flow type	High flow type
EXHAUST MANIFOLD	Stock	Stock or high flow type
OUTLET/FRONT PIPE	Stock or high flow type Recommended: TOMEI EXPREME	High flow type Recommended: TOMEI EXPREME
CATALYTIC CONVERTER	Stock or high flow type	
EXHAUST	Around Φ80-Φ90 main section	
ECU	Vehicle/setup specific	
BLOW-OFF VALVE	High performance type, not vent to atmosphere	
SPARK PLUGS	No. 8 / 9 or similar	



This setup guide is for reference only.

Parts selection and tuning should be made based on you particular setup and/or intended use.



27 Rancho Cir, Lake Forest, CA 92630 USA

Phone : +1-949-855-6577

www.tomeiusa.com

OPEN : Monday-Friday

(National holidays and public holidays excluded)

10:00 - 19:00 PST



マルチレートビレットアクチュエーター MULTI-RATE BILLET ACTUATOR

目次 / INDEX

P2 日本語

P11 English

このたびは弊社製品をお買い上げいただき、まことにありがとうございます。
ご使用前にこの説明書をよくお読みのうえ正しくお使いください。
お読みになった後もすぐ取り出せる場所に大切に保管してください。
説明書に書かれている注意事項は必ず守ってください。
各自動車メーカーの発行する整備要領書が必要になります。本書と合わせて
お使いください。
不適切な使用により事故が生じた場合、弊社では責任を負いかねますので、
あらかじめご了承ください。

Thank you for purchasing a TOMEI product.
Please read this installation manual carefully prior to installation/use.
Ensure you keep this document stored in a safe location for future reference.
Pay close attention to and adhere to the various warnings/cautions contained herein.
You should also consult the official servicing manual for your vehicle when installing
this product.
Please note that inappropriate installation/use of this product will be at the owner's
own risk and/or responsibility.
Retailers/Workshops should ensure this document is given to the end user.

品番 PART NUMBER	適合ターボチャージャーキット			初期設定圧 (kgf/cm ²)	セット スプリング
	エンジン	サイズ	品番		
TB401B-ACT10	RB26DETT	MX7655	TB401A-NS05A	1.00	銀 / 紫
		MX8260	TB401A-NS05B	1.00	銀 / 紫
TB401B-ACT07	RB25DET	MX8265	TB401A-NS06A	1.00	銀 / 紫
TB401B-ACT09	SR20DET	MX7960	TB401A-NS08A	1.00	銀 / 紫
		MX8270	TB401A-NS08B	1.00	銀 / 紫
	KA24DE	MX7960	TB401A-NS16C	1.00	銀 / 紫
		MX8270	TB401A-NS16D	1.00	銀 / 紫
TB401B-ACT13	EJ SINGLE SCROLL	MX7760	TB401A-SB01A	1.00	銀 / 紫
		MX7960	TB401A-SB01B	1.00	銀 / 紫
		MX8265	TB401A-SB01C	1.00	銀 / 紫
TB401B-ACT14		MX7960F	TB401A-SB01D	1.00	銀 / 紫
TB401B-ACT12	4G63 EVO4-9	MX7960	TB401A-MT01A	1.00	銀 / 紫
		MX7967	TB401A-MT01B	1.00	銀 / 紫
TB401B-ACT11	4B11	MX8280	TB401A-MT02A	1.00	銀 / 紫
TB401B-ACT08	1JZ-GTE	MX8280	TB401A-TY04A	1.00	銀 / 紫
TB401B-ACT15	G4KF	MX7960	TB401A-HY01A	1.00	銀 / 紫



注意

- 本取扱説明書は製品に関わる特記事項についてのみ記載しています。
実際の作業や手順については各自動車メーカー発行の整備要領書などを併用してください。
- 本製品は自動車競技部品です。サーキットなどの公道ではない閉鎖された場所で使用してください。
- 本製品を取り付け、調整することにより、エンジン出力が向上する場合があります。
そのため、エンジン制御やその他周辺装置の最適化が必要になります。
- ターボメーターなどで常にコンディションの確認をしてください。



警告

- 適合する車種以外へのご使用はおやめください。本製品および、ターボチャージャーやエンジンを破損する恐れがあります。
- 本製品の取り付けは設備の整った環境で、資格をもった整備士が行ってください。
- 本製品を取り付ける際には、適切な工具、保護具を使用してください。
ご使用にならないとけがにつながり危険です。
- 本製品の取り付けはエンジンが十分に冷えた状態で行ってください。
エンジンが冷えていない状態の作業は火傷の恐れがあります。
- 本製品の取り付けに必要な各部品の脱着の際には指定トルクなどを守り、無理な力を加えないでください。本製品および、ターボチャージャーやエンジンを破損する恐れがあります。

取付/調整作業に必要な工具類

- エンジン整備工具一式
- 整備要領書

製品構成

下記の部品・数量が揃っているかご確認ください。



上記アクチュエーター本体は参考図となります。機種によって形状は異なります。

部品番号	名称	品番	数量
①	アクチュエーター本体	P2参照	1
②	ストレートニップル	TB401B-SAN01	1
③	アクチュエーター Springs 黒	TB401B-SPR07	1
④	アクチュエーター Springs 銀	TB401B-SPR08	1
⑤	アクチュエーター Springs 紫	TB401B-SPR09	1
⑥	アクチュエーター Springs 赤	TB401B-SPR10	1
⑦	アクチュエーター Springs ピンク	TB401B-SPR11	1
⑧	アクチュエーター Springs 青	TB401B-SPR12	1



アクチュエーター Springs セット Springs とスペア Springs について

- アクチュエーター本体にはアクチュエーター Springs が2本セットされています（セット Springs P2参照）。
そのため同梱されている Springs 単体（スペア Springs）は上記製品構成からセットされている Springs を抜いたものになります。
（セット Springs） + （スペア Springs） = 6本 となります。



アクチュエーター Springs の選択について

本書に記載の各 Springs の単体/設定圧力はアクチュエーター単体で2mmのプリロードをかけた状態でスイングバルブが開き始める圧力となっています。
実際の過給圧の設定は1次排圧の影響や他の部品の仕様により大きく異なる場合があります。過給圧の決定はブーストコントローラーを併用のうえ、実走に等しい環境で確認しながら慎重に行ってください。

1.プリロード調整とターボチャージャーへの取り付け

！ 注意

- 本書の解説は車両からターボチャージャーが取り外されていること、ターボチャージャーからアクチュエーターが取り外されていることを前提としています。車両/ターボチャージャーからの取り外しや、車両への復帰はターボチャージャーの取扱説明書や整備要領書を参照してください。
- 本製品はターボチャージャーキットの補修部品として設定しております。アクチュエーター脱着の際は取り付けボルトやRクリップ、Eリングなどはターボチャージャーキットで使用していたものを再使用しますので、作業の際に無くさないようにご注意ください。

1-1. ターボチャージャーへの取り付け


ターボチャージャーキットから取り外したアクチュエーター取り付けボルトを再使用して取り付けます。

1-2で解説するプリロードを調整したあと、RクリップまたはEリングを使用してターボチャージャーのスイングバルブブラケットにロッドを固定し、最後にロッドナットを締め付けます。

1-2. プリロード調整


本製品はターボチャージャー装着時に2mmのプリロードをロッドにかけるように設計されております。プリロードが正しくかかっていることを確認しながら取り付けてください。

調製例

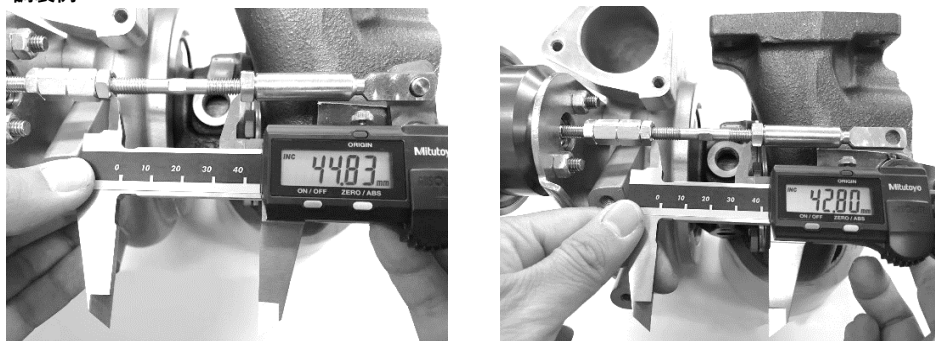

- ① アクチュエーター本体をターボチャージャーに取り付けてください。
- ② アクチュエーターロッドを調整し、ターボチャージャーのスイングバルブブラケットと接続してください。

※ このとき、ターボチャージャーのスイングバルブがしっかりと閉じていることを確認してください。
- ③ ②の状態アクチュエーターロッドの任意の場所の長さを測ってください。
- ④ アクチュエーターロッドをスイングバルブブラケットから外し、ロッドの長さを③で測った長さより2.00~2.25mm程度短くなるように調整してください。

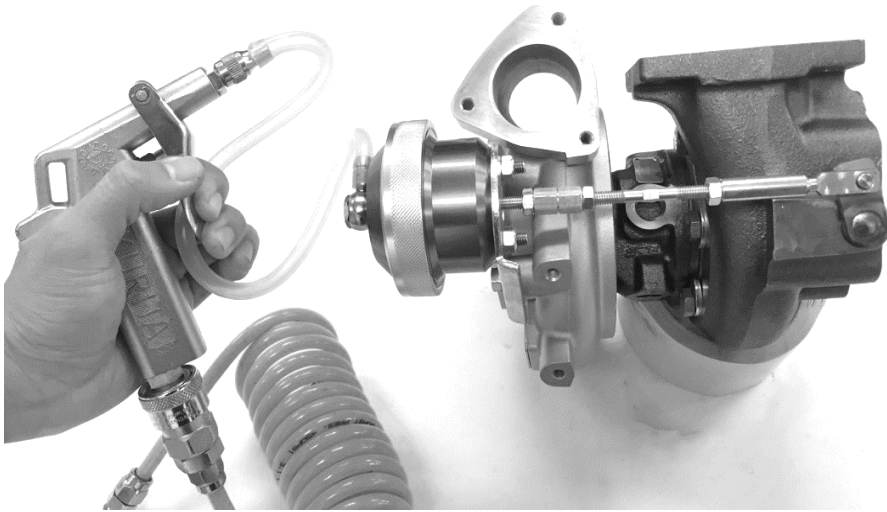

- ⑤ アクチュエータにセットされたスプリングよりも少し高めの圧力をかけてください。
圧力をかけるとアクチュエーターロッドが動いてスイングバルブブラケットと接続できるようになります。



3kgf/cm²以上の圧力はかけないようにご注意ください。

- ⑥ RクリップまたはEリングを使用してターボチャージャーのスイングバルブブラケットに
アクチュエーターロッドを固定してください。
- ⑦ アクチュエーターロッドのナットを締め付けてください。

2.目標ブースト圧の設定（アクチュエータースプリングの交換方法）

本製品はアクチュエータースプリングを最大3つまで組み合わせることにより、ブースト設定値を変更することができます。下記を参考に目的に合ったアクチュエータースプリングを選択してください。スプリングには識別色がついていますが、色がわかりづらい場合は下記のサイズで区別してください。なお、スプリングは最低希望ブースト圧に合わせて選択してください。

スプリング	kgf/cm ²	0.20	0.4	0.6	0.9	0.65	0.75
単体圧力	Kpa	19.61	39.23	58.84	88.26	63.74	73.55
	PSI	2.84	5.69	8.53	12.80	9.25	10.67
設置位置		インナー	インナー	ミドル	ミドル	アウター	アウター
品番		TB401B -SPR07	TB401B -SPR08	TB401B -SPR09	TB401B -SPR10	TB401B -SPR11	TB401B -SPR12
識別色		黒	銀	紫	赤	ピンク	青
サイズ	外径 mm	29	29	36.5	36.5	44	44
	長さ mm	32	36	43	52	57	68
設定圧力							
kgf/cm ²	Kpa	PSI					
0.20	19.61	2.84	0.20				
0.40	39.23	5.69		0.40			
0.60	58.84	8.53			0.60		
0.65	63.74	9.25				0.65	
0.75	73.55	10.67					0.75
0.80	78.45	11.38	0.20		0.60		
0.85	83.36	12.09	0.20			0.65	
0.90	88.26	12.80				0.90	
0.95	93.16	13.51	0.20				0.75
1.00	98.07	14.22		0.40	0.60		
1.05	102.97	14.93		0.40		0.65	
1.10	107.87	15.65	0.20			0.90	
1.15	112.78	16.36		0.40			0.75
1.25	122.58	17.78			0.60	0.65	
1.30	127.49	18.49		0.40		0.90	
1.35	132.39	19.20			0.60		0.75
1.45	142.20	20.62	0.20		0.60	0.65	
1.55	152.00	22.05	0.20		0.60		0.75
1.55	152.00	22.05				0.90	0.65
1.65	161.81	23.47		0.40	0.60		0.65
1.65	161.81	23.47				0.90	0.75
1.75	171.62	24.89	0.20			0.90	0.65
1.75	171.62	24.89		0.40	0.60		0.75
1.85	181.42	26.31	0.20			0.90	0.75
1.95	191.23	27.74		0.40		0.90	0.65
2.05	201.04	29.16		0.40		0.90	0.75

※ 上記の設定値はあくまでも目安です。ブースト値は車両の仕様により変化します。

※ 実際のブースト値の設定はブーストコントローラーを併用してください。ブーストコントローラーの設定を主とし、アクチュエーターを補助として調整することで、安定したブーストセッティングが可能となります。

2-1. アクチュエーターの分解

- ① ターボチャージャーからアクチュエーターを取り外してください。




このとき、アクチュエーターロッドとターボチャージャーのスイングバルブブラケットを固定しているRクリップやEリングを紛失しないように注意してください。

RクリップやEリングは再使用します。

- ② アクチュエーターからステータを取り外してください。
- ③ スイベルニップルを外してください。
- ④ アクチュエーターロッドのクレビスとロッドナットを外してください。
アクチュエーターロッドを外せる機種はロッドごと外してください。
作業がしやすくなります。
- ④ アクチュエーターケースをバイス（万力）などで押さえつけてください。
それによりケース/ロックリングへのスプリングの反力が無くなり、ケースを分解することができます。



ロックリングを外す際の注意

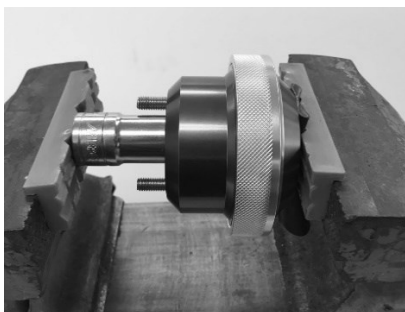

ロッドが外せる機種の場合の一例



ロッドが外せない機種の場合の一例

なるべくケースの中心に均等に圧力がかかるようにバイス（万力）以外のツールも使用して締め付けてください。

この際、必要以上の力で締め付けしないでください。ケースを破損する恐れがあります。
また、アクチュエーターケースが傷つかないような保護をしてください。



ケースに合いマークを入れてください




アッパーケースとロアケースの任意の場所に
合いマークを入れてください。
組み立ての際にロゴの向きをもとに
戻すために必要になります。

⑤ バイス（万力）から外してください。



この際、まだケースにスプリングの反力がかかっているため、慎重に扱ってください。

アクチュエーター分解図

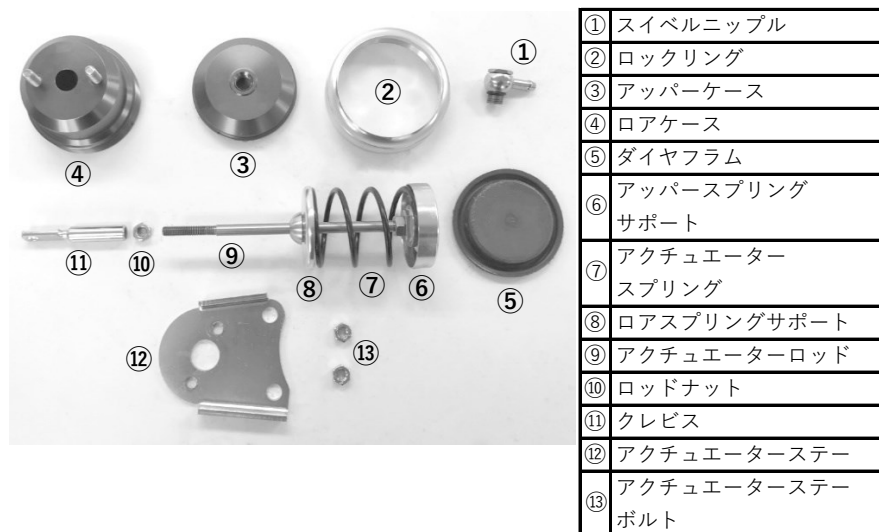

2-2. アクチュエータスプリングの交換



アッパースプリングサポートの裏にはインナー/ミドル/アウター用のスプリングガイドがあります。ここに各スプリングを用途に合わせてセットします。


作業例 初期セットスプリング 1.00kgf/cm^2 を 1.55kgf/cm^2 に変更する



- ① 初期セットスプリングは 1.00kgf/cm^2 (銀/紫) がセットされています。



- ② 0.20kgf/cm^2 (黒/インナー)
 0.60kgf/cm^2 (紫/ミドル)
 0.75kgf/cm^2 (青/アウター)
に変更します。

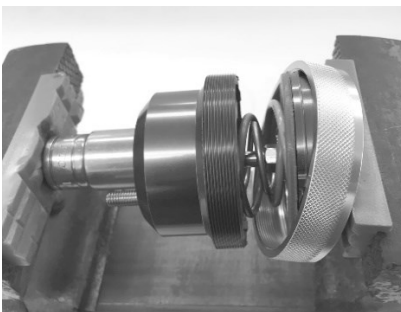

- ③ 本書2-1.アクチュエーターの分解を参考にし、バイス（万力）などでアクチュエータスプリングを縮めてくロックリングで固定してください。



この際、スプリングがスプリングガイドに正しく着座していることを確認しながら締めていってください。


アッパースプリングサポートにダイヤフラムを被せるのを忘れないようにしてください。



ケースを閉じるときの注意



アッパーケース

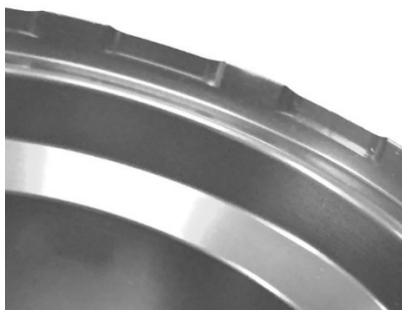

ロアケース

ケースを分解した際につけたアッパーケースとロアケースの合いマークを合わせてください。そうすることでロゴマークが初期の位置になります。
また、アッパーケースに3ヶ所、ロアケースに12ヶ所の切り欠きがあります。その切り欠きどうしを合わせて固定してください。

2-3. アクチュエータースプリング選択方法の一例



- アクチュエーターを動かさないように固定する。
- 計測器（マイクロメーターなど）アクチュエーターロッドのトラベル量が計測できるようセットする
- 圧力計を通してアクチュエーターにエアを入れる
- 計測器の動きでアクチュエーターの動作圧力を確認する。
- アクチュエータースプリング一覧表を参考に目的にあったスプリングに入れ替える

3.ターボチャージャー/車両への復帰

- これまでに取り外したアクチュエーターロッド/スイベルニップル/アクチュエーターステアなどを元に戻し、ターボチャージャー/車両へと取り付けてください。

P/N	COMPATIBLE TURBOCHARGER KITS			PRESET (kgf/cm ²)	SET SPRINGS
	ENGINE	SIZE	P/N		
TB401B-ACT10	RB26DETT	MX7655	TB401A-NS05A	1.00	SILVER/PURPLE
		MX8260	TB401A-NS05B	1.00	SILVER/PURPLE
TB401B-ACT07	RB25DET	MX8265	TB401A-NS06A	1.00	SILVER/PURPLE
TB401B-ACT09	SR20DET	MX7960	TB401A-NS08A	1.00	SILVER/PURPLE
		MX8270	TB401A-NS08B	1.00	SILVER/PURPLE
	KA24DE	MX7960	TB401A-NS16C	1.00	SILVER/PURPLE
		MX8270	TB401A-NS16D	1.00	SILVER/PURPLE
TB401B-ACT13	EJ SINGLE SCROLL	MX7760	TB401A-SB01A	1.00	SILVER/PURPLE
		MX7960	TB401A-SB01B	1.00	SILVER/PURPLE
		MX8265	TB401A-SB01C	1.00	SILVER/PURPLE
		MX7960F	TB401A-SB01D	1.00	SILVER/PURPLE
TB401B-ACT12	4G63 EVO4-9	MX7960	TB401A-MT01A	1.00	SILVER/PURPLE
		MX7967	TB401A-MT01B	1.00	SILVER/PURPLE
TB401B-ACT11	4B11	MX8280	TB401A-MT02A	1.00	SILVER/PURPLE
TB401B-ACT08	1JZ-GTE	MX8280	TB401A-TY04A	1.00	SILVER/PURPLE
TB401B-ACT15	G4KF	MX7960	TB401A-HY01A	1.00	SILVER/PURPLE



CAUTION

- This installation manual contains important information regarding this product.
For details regarding the assembly/disassembly of stock components, please refer to the vehicle's official servicing manual.
- This product is intended for motorsport use and should only be used on a racing circuit or a circuit closed off from public roads.
- Installing this product will increase the engine's power output. After installation, the engine management system and other surrounding components will need to be adjusted accordingly.
- Ensure you consistently monitor the turbo's performance using gauges and/or similar devices.



WARNING

- Only install this product on the specified vehicles to avoid damaging the product and/or engine.
- This product should be installed by a trained professional in a well-equipped workshop.
- Ensure you use the appropriate tools and safety gear when installing this product.
Failing to do so may result in injury.
- Install this product only when the engine is cool and/or cold to avoid potential fire hazards.
- Ensure you use the correct specified torque for each fastening. Do not use excessive force when attaching or removing components as this may damage the product and/or engine.

REQUIRED TOOLS FOR INSTALLATION

- General engine maintenance tools
- Official servicing manual

KIT CONTENTS

Check to ensure all the following items are included in this kit.



Depending on the application, the actuator may look different compared to the one above.

REF. NO.	PART	P/N	QTY
①	ACTUATOR	See P2	1
②	STRAIGHT NIPPLE	TB401B-SAN01	1
③	ACTUATOR SPRING, BLACK	TB401B-SPR07	1
④	ACTUATOR SPRING, SILVER	TB401B-SPR08	1
⑤	ACTUATOR SPRING, PURPLE	TB401B-SPR09	1
⑥	ACTUATOR SPRING, RED	TB401B-SPR10	1
⑦	ACTUATOR SPRING, PINK	TB401B-SPR11	1
⑧	ACTUATOR SPRING, BLUE	TB401B-SPR12	1



ACTUATOR SPRINGS: PRESET SPRINGS & SPARE SPRINGS

- The actuator ships preconfigured with 2 springs already inside.
(See P11, SET SPRINGS) .
Besides these 2 springs, there are an additional 4 spare springs included.
(SET SPRINGS) + (SPARE SPRINGS) = 6 SPRINGS IN TOTAL



CHOOSING ACTUATOR SPRINGS

The standalone pressure/spring rate of each spring shown in this manual were all measured with 2mm of preload applied. Actual boost pressure will vary depending on pre-turbo exhaust pressure as well as the supporting modifications. Note, boost settings should be made using a boost controller in an accurately simulated driving environment.

1. ADJUSTING PRELOAD AND INSTALLATION



CAUTION

- The following information is based on the turbocharger and actuator being completely removed from the vehicle and separated from one another in advance.
For details on removing and/or reinstalling the turbocharger, please refer to the turbocharger installation manual or the vehicle's official servicing manual.
- This product is a components of the turbocharger kit.
Be careful not to misplace the R and/or E clips when removing the actuator from the turbocharger. These will be reused again later.

1-1. INSTALLING ONTO THE TURBOCHARGER

Reinstall the actuator onto the turbocharger using the actuator bolts.

After adjusting the preload as detailed in 1-2, use the R and/or E clip to re-secure the actuator rod to the wastegate bracket.


Remember to also tighten down the actuator rod nut(s).

1-2. ADJUSTING THE PRELOAD


This actuator is designed to take 2mm of preload when attached to the turbocharger.

Ensure the preload is applied correctly as you proceed with the installation.

調製例

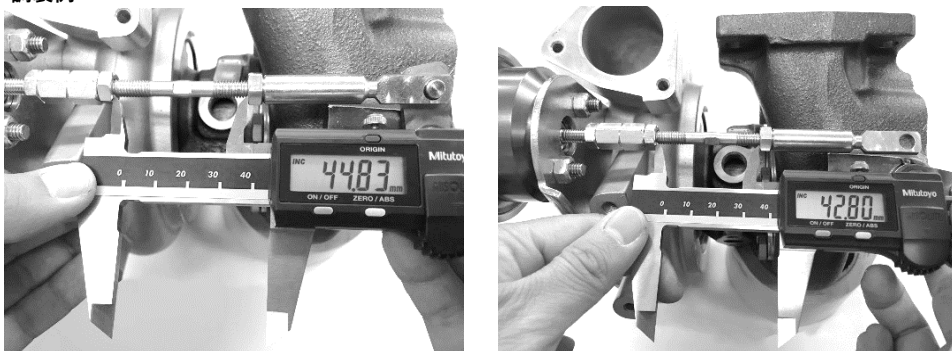

- ① Install the actuator onto the turbocharger.
- ② Adjust and connect the actuator rod to the wastegate bracket.
 - ※ Ensure the wastegate is fully closed during this process.
- ③ Measure the required actuator rod length as set during ②.
- ④ Temporarily remove the actuator rod from the wastegate bracket and shorten the length measured during ③ by 2.00~2.25mm.

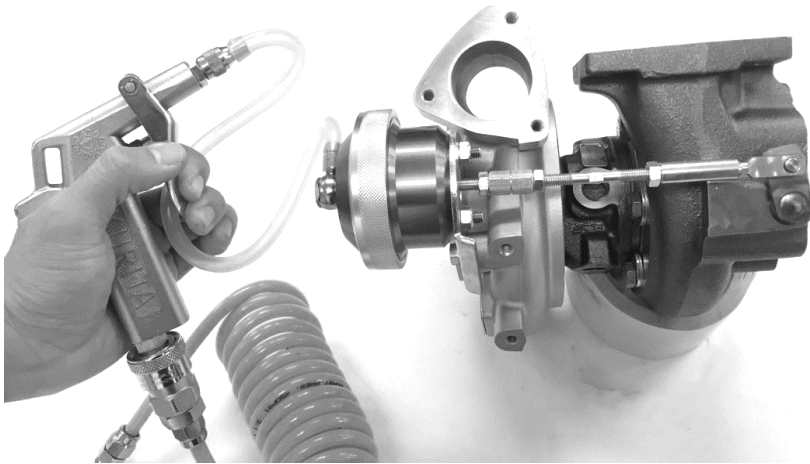

- ⑤ Apply air pressure to the actuator using slightly higher pressure than the configured springs. This will move the actuator rod, allowing you to reconnect it to the wastegate bracket.



Do not apply more than 3kgf/cm² of pressure.

- ⑥ Secure the actuator rod to the wastegate bracket using the R and/or E clip.
- ⑦ Tighten down the nuts on the actuator rod.

2. SETTING BOOST PRESSURE (CHANGING SPRINGS)

This product features interchangeable actuator springs, allowing you to set different boost pressures by combining up to 3 springs. Use the below information as reference to find the combination for you. All the springs are color coded. However, if you are unsure, use the sizing chart below for reference. Note that spring(s) should be chosen based on the lowest desired boost pressure.

STANDALONE	kgf/cm ²	0.20	0.4	0.6	0.9	0.65	0.75
SPRING	Kpa	19.61	39.23	58.84	88.26	63.74	73.55
PRESSURE	PSI	2.84	5.69	8.53	12.80	9.25	10.67
POSITIONING		INNER	INNER	MIDDLE	MIDDLE	OUTER	OUTER
P/N		TB401B -SPR07	TB401B -SPR08	TB401B -SPR09	TB401B -SPR10	TB401B -SPR11	TB401B -SPR12
COLOR		BLACK	SILVER	PURPLE	RED	PINK	BLUE
SIZE	O.D (mm)	29	29	36.5	36.5	44	44
	LENGTH (mm)	32	36	43	52	57	68
CONFIGURED PRESSURE							
kgf/cm ²	Kpa	PSI					
0.20	19.61	2.84	0.20				
0.40	39.23	5.69		0.40			
0.60	58.84	8.53			0.60		
0.65	63.74	9.25				0.65	
0.75	73.55	10.67					0.75
0.80	78.45	11.38	0.20		0.60		
0.85	83.36	12.09	0.20			0.65	
0.90	88.26	12.80				0.90	
0.95	93.16	13.51	0.20				0.75
1.00	98.07	14.22		0.40	0.60		
1.05	102.97	14.93		0.40		0.65	
1.10	107.87	15.65	0.20			0.90	
1.15	112.78	16.36		0.40			0.75
1.25	122.58	17.78			0.60	0.65	
1.30	127.49	18.49		0.40		0.90	
1.35	132.39	19.20			0.60		0.75
1.45	142.20	20.62	0.20		0.60	0.65	
1.55	152.00	22.05	0.20		0.60		0.75
1.55	152.00	22.05				0.90	0.65
1.65	161.81	23.47		0.40	0.60		0.65
1.65	161.81	23.47				0.90	0.75
1.75	171.62	24.89	0.20			0.90	0.65
1.75	171.62	24.89		0.40	0.60		0.75
1.85	181.42	26.31	0.20			0.90	0.75
1.95	191.23	27.74		0.40		0.90	0.65
2.05	201.04	29.16		0.40		0.90	0.75

※ The above is for reference only. Actual settings will vary depending on the vehicle specifications.

※ A boost controller should be used in conjunction to accurately adjust boost settings.

For best results, the boost controller should be used as the main boost control device, with the actuator springs providing a secondary level of adjustment.

2-1. DISASSEMBLING THE ACTUATOR

- ① Remove the actuator from the turbocharger.




Be careful not to misplace the R and/or E clips that secure the actuator rod to the wastegate bracket. These will be reused again later.


- ② Remove the actuator bracket from the actuator.
- ③ Remove the swivel nipple.
- ④ Remove the clevis and rod nuts from the actuator rod.
Remove the actuator rod if possible. (Only on some models)
This will make the following steps easier.
- ④ Secure the actuator case using a vice or similar tool.
This will relieve the pressure on the spring(s) and allow you to remove the case/lock ring.



BE CAREFUL WHEN REMOVING THE LOCK RING

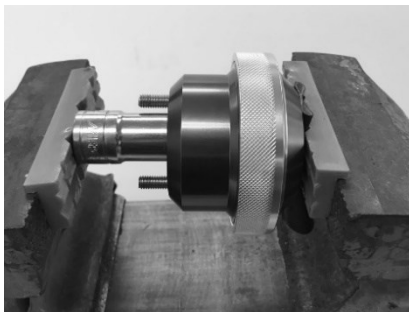

Actuator with removable rod.

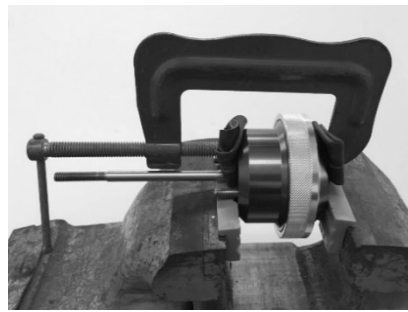

Actuator without removable rod.

Try to apply the clamping force evenly to the actuator casing using additional clamping tools.

Do not use excessive force as this may damage the actuator.

Ensure you also protect the actuator casing against scratches.



NOT THE CASING ALIGNMENT



Make note of the alignment of the upper case in relation to the lower case.


This is to ensure the logo is orientated in the same direction during reassembly.

- ⑤ Remove the actuator from the vice.



Take care during this step as there is still some pressure being applied by the springs.

DISASSEMBLED ACTUATOR

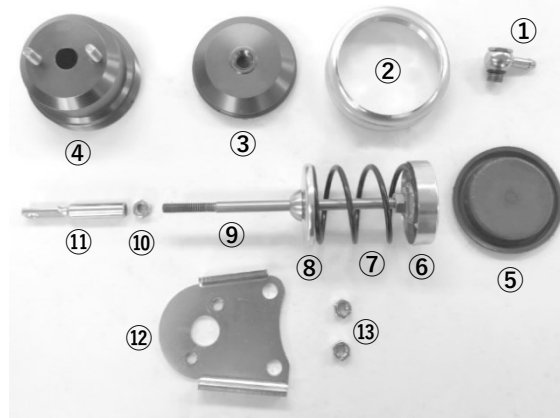


①	SWIVEL NIPPLE
②	LOCK RING
③	UPPER CAE
④	LOWER CASE
⑤	DIAPHRAGM
⑥	UPPER SPRING SUPPORT
⑦	ACTUATOR SORING
⑧	LOWER SPRING SUPPORT
⑨	ACTUATOR ROD
⑩	ROD NUT
⑪	CLEVIS
⑫	ACTUATOR BRACKET
⑬	ACTUATOR BRACKET BOLT

2-2. CHANGING ACTUATOR SPRINGS



The upper spring support is stepped to accommodate the inner, middle and outer springs. Each spring should be seated on their respective step.


EXAMPLE: CHANGING FROM THE INITIAL 1.00kgf/cm² TO 1.55kgf/cm²

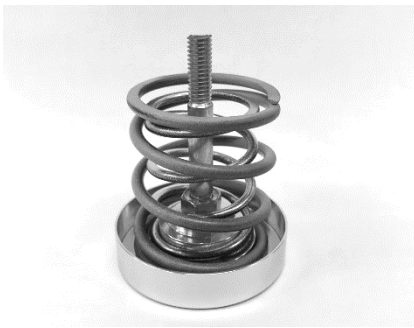

- ① The initial boost pressure is set at 1.00kgf/cm² (SILVER/PURPLE)



- ② 0.20kgf/cm² (BLACK/INNER)
0.60kgf/cm² (PURPLE/MIDDLE)
0.75kgf/cm² (BLUE/OUTER)
Now reconfigured to 1.55kgf/cm²

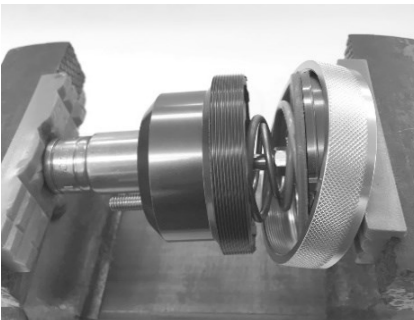

- ③ Using step 2-1 as reference, clamp and compress the actuator springs in the housing using a vice, then secure using the lock ring.



Ensure the springs are seated correctly before compressing the actuator ASSY.


Remember to also place the diaphragm on top of the upper spring support.



CAUTION WHEN CLOSING THE CASING



UPPER CASE

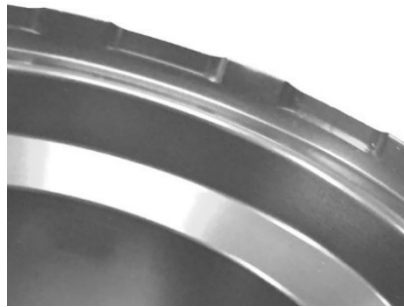

LOWER CASE

Ensure you align the upper and lower casings according to the alignment marks made earlier. This ensure that the logo is orientated the same as before. Also, there are alignment notches on both the upper (x3) and lower (x12) casings. Make sure these also align when reassembling the actuator.

2-3. HOW TO CHOOSE ACTUATOR SPRINGS (EXAMPLE)



- Clamp/secure the actuator on a stable surface so that it doesn't move.
- Next, set up a dial indicator or similar tool so that you can accurately measure actuator rod travel.
- Using an air compressor and pressure gauge, apply air pressure to the actuator.
- Note the pressure at which the actuator rod begins to move.
- Then, use the following table to choose the appropriate spring(s) for your setup.

3. REINSTALLING ONTO THE TURBOCHARGER/VEHICLE

- Reassemble the actuator rod, swivel nipple and actuator bracket.
Then, reinstall onto the turbocharger and/or vehicle



27 Rancho Cir, Lake Forest, CA 92630 USA
Phone : +1-949-855-6577

www.tomeiusa.com

OPEN : Monday-Friday
(National holidays and public holidays excluded)
10:00 - 19:00 PST